

User Manual

Revision 1.002

English

BACnet/IP / BACnet MSTP – Converter/Router

(Order Code: HD67686-A1 , HD67686-B2)

For Website information:

www.adfweb.com?Product=HD67686

For Price information:

www.adfweb.com?Price=HD67686-A1

www.adfweb.com?Price=HD67686-B2

Benefits and Main Features:

- ⊕ Triple Electrical isolation
- ⊕ Temperature range: -40°C/+85°C (-40°F/+185°F)



User Manual



HD67686-A1



HD67686-B2

For other BACnet products see also the following link:

Converter BACnet Master to

www.adfweb.com?Product=HD67704
www.adfweb.com?Product=HD67712
www.adfweb.com?Product=HD67714
www.adfweb.com?Product=HD67716
www.adfweb.com?Product=HD67717
www.adfweb.com?Product=HD67718
www.adfweb.com?Product=HD67719
www.adfweb.com?Product=HD67721
www.adfweb.com?Product=HD67722
www.adfweb.com?Product=HD67723
www.adfweb.com?Product=HD67725
www.adfweb.com?Product=HD67726

www.adfweb.com?Product=HD67737
www.adfweb.com?Product=HD67801
www.adfweb.com?Product=HD67832
www.adfweb.com?Product=HD67937

www.adfweb.com?Product=HD67965
www.adfweb.com?Product=HD67B31

www.adfweb.com?Product=HD67D16

(DMX)
 (Modbus Slave)
 (Modbus TCP Slave)
 (PROFIBUS Slave)
 (CAN)
 (CANopen)
 (PROFINET)
 (DeviceNet Slave)
 (EtherNet/IP Slave)
 (NMEA 2000)
 (J1939)
 (SNMP Agent)

(IEC 61850 Server)
 (KNX)
 (DALI)
 (MQTT)

(IO-Link Slave)
 (OPC UA Server)

(LoRaWAN)

INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	7
CONFIGURATION	7
POWER SUPPLY	8
FUNCTION MODES	9
LEDS	10
RS485	11
ETHERNET	12
USE OF COMPOSITOR SW67686	13
NEW CONFIGURATION / OPEN CONFIGURATION	14
SOFTWARE OPTIONS	15
SET COMMUNICATION	16
UPDATE DEVICE	18
MECHANICAL DIMENSIONS	20
ORDERING INFORMATIONS	22
ACCESSORIES	22
DISCLAIMER	23
OTHER REGULATIONS AND STANDARDS	23
WARRANTIES AND TECHNICAL SUPPORT	24
RETURN POLICY	24

UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- ✦ Updated
- ✦ Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page www.adfweb.com/download/ and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

REVISION LIST:

Revision	Date	Author	Chapter	Description
1.001	01/06/2016	Nt	All	Revision
1.002	08/10/2024	Ln	All	Revision
1.100	23/06/2025	Mdb	All	New Design

WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning.

ADFweb.com is not responsible for any error this manual may contain.

TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

SECURITY ALERT:**GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

INTENDED USE

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

QUALIFIED PERSONNEL

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

RESIDUAL RISKS

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

CE CONFORMITY

The declaration is made by our company. You can send an email to support@adfweb.com or give us a call if you need it.

EXAMPLES OF CONNECTION:

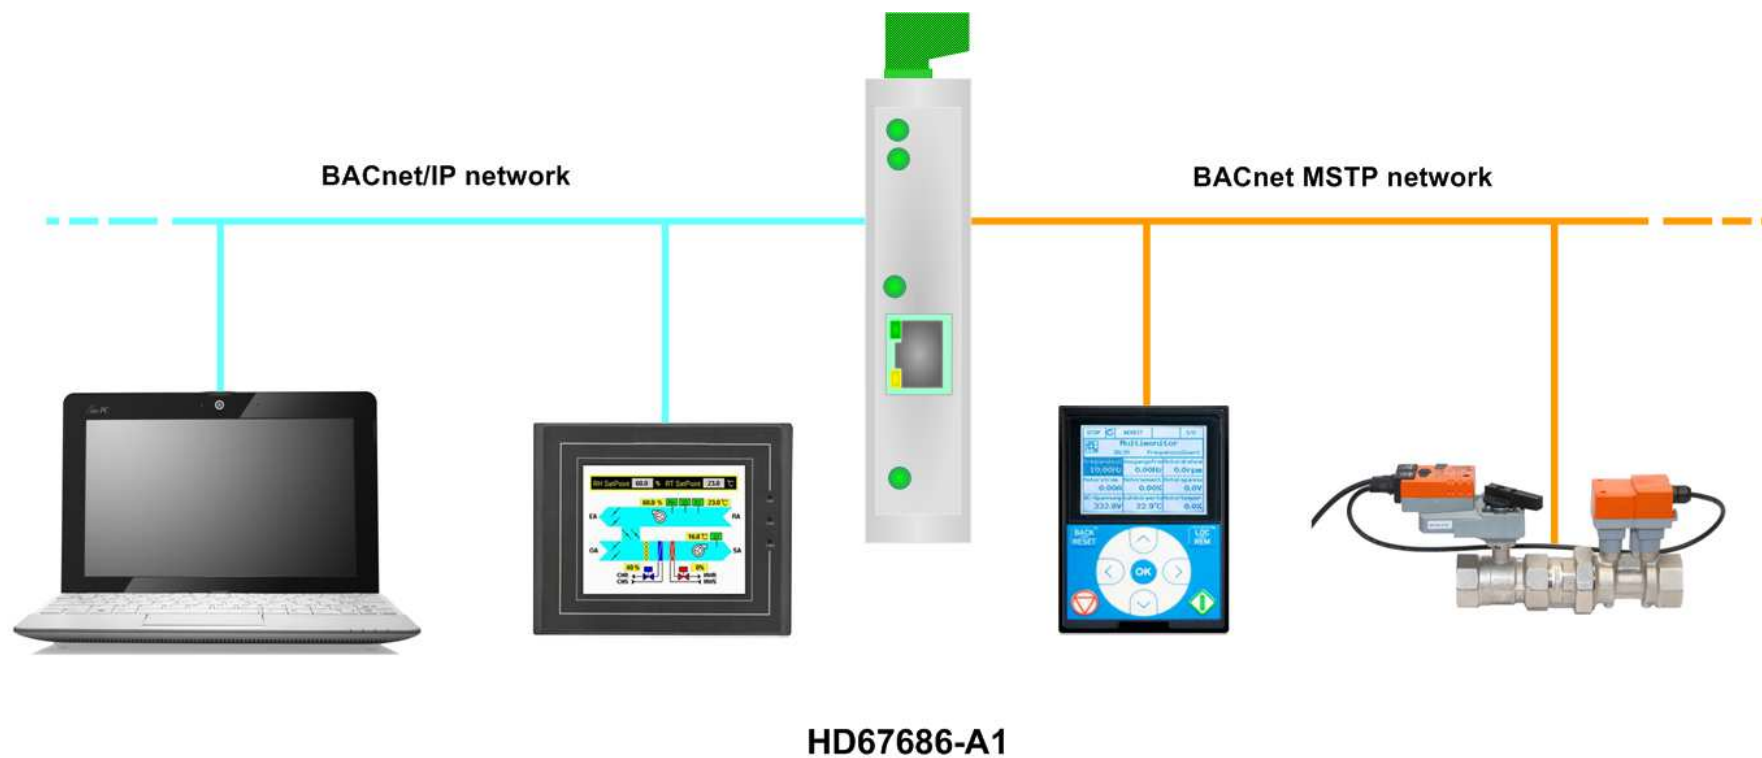

CONNECTION SCHEME:

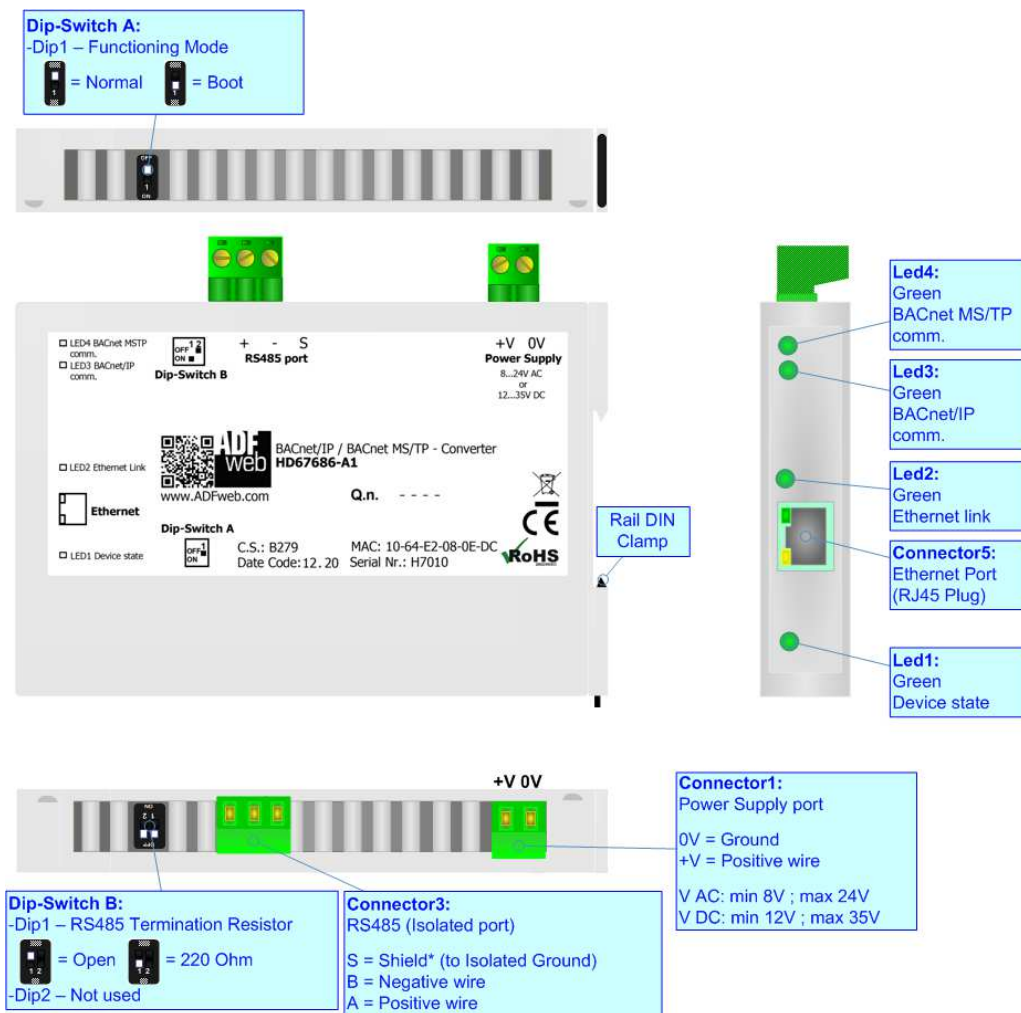


Figure 1a: Connection scheme for HD67686-A1

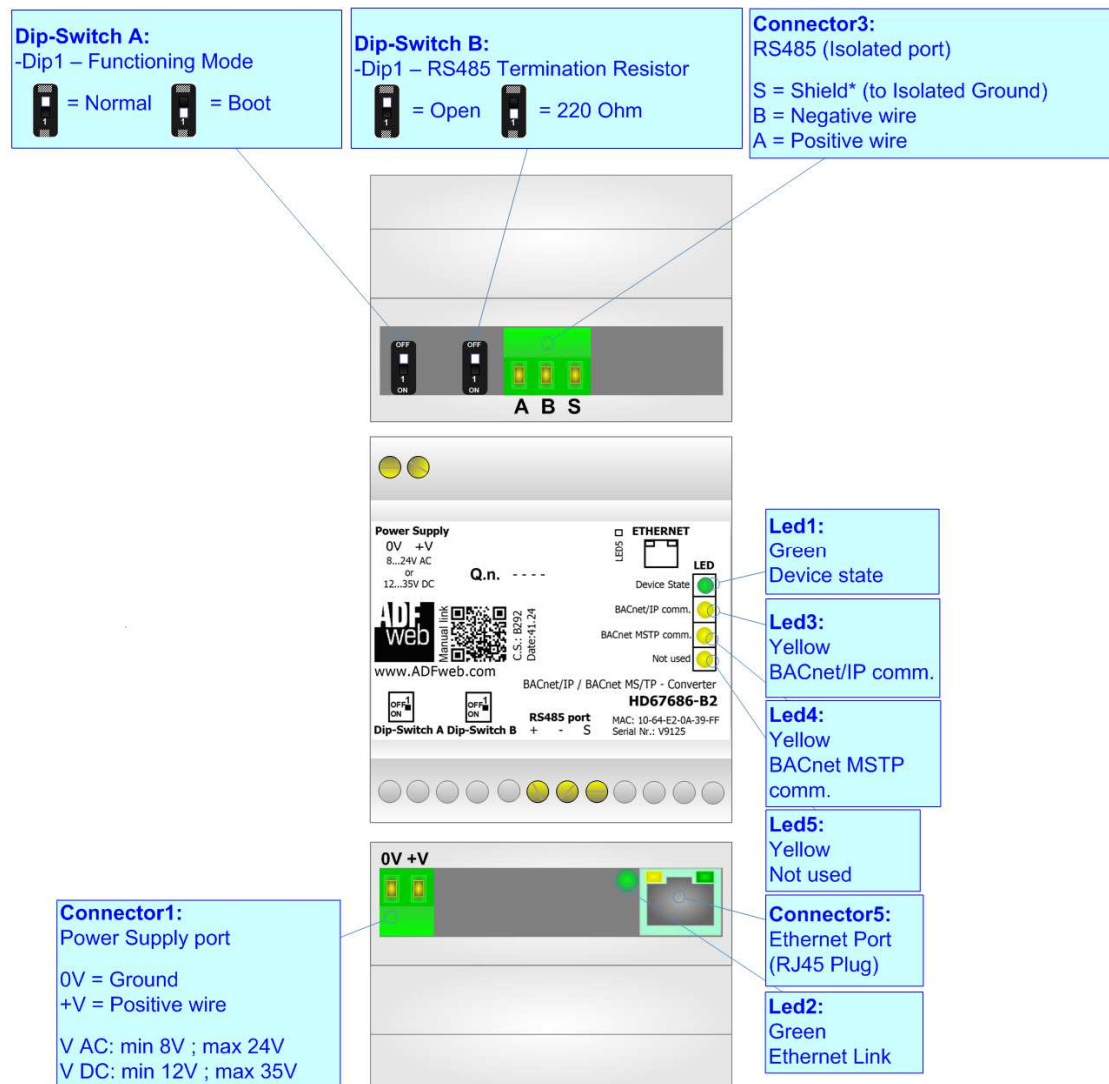


Figure 1b: Connection scheme for HD67686-B2

CHARACTERISTICS:

The HD67686-A1 and the HD67686-B2 are BACnet/IP / BACnet MSTP Converters.

It allows for the following characteristics:

- Router function;
- Completely transparent converter from BACnet/IP to BACnet MSTP and vice versa;
- Triple isolation between RS485 - Power Supply, RS485 - Ethernet, Ethernet - Power Supply;
- Two-directional information between BACnet/IP bus and BACnet MSTP bus;
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 8...24V AC or 12...35V DC;
- Wide temperature range: -40°C / +85°C [-40°F / +185°F].



CONFIGURATION:

You need Compositor SW67686 software on your PC in order to perform the following:

- Define the parameters of BACnet/IP line;
- Define the parameters of BACnet MSTP line;
- Update the device.

POWER SUPPLY:


The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.

VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V


Consumption at 24V DC:

Device	Consumption [W/VA]
HD67686-A1	3.5
HD67686-B2	3.5


Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

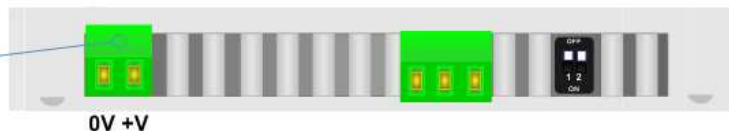


Caution: Do not reverse the polarity power

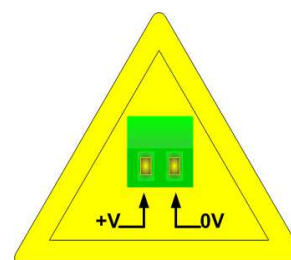

HD67686-B2

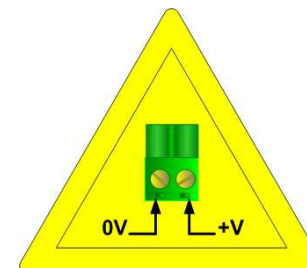

HD67686-A1

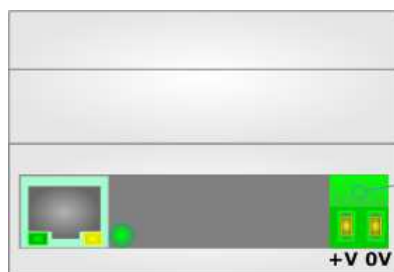

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V


FUNCTION MODES:

The device has got two functions mode depending of the position of the Dip1 of 'Dip-Switch A':

- The first, with Dip1 in Off position (factory setting), is used for the normal working of the device.
- The second, with Dip1 in On position, is used for upload the Project/Firmware.

For the operations to follow for the updating (see 'UPDATE DEVICE' section).



According to the functioning mode, the LEDs will have specifics functions (see 'LEDS' section).

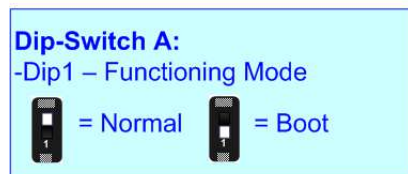

LEDS:


The device has got four LEDs (five for the HD67686-B2) that are used to give information about the functioning status. The various meanings of the LEDs are described in the table below.

LED	Normal Mode	Boot Mode
1: Device State (green)	Blinks slowly ($\sim 1\text{Hz}$)	ON: Device powered OFF: Device not powered
2: Ethernet Link (green)	ON: Ethernet cable connected OFF: Ethernet cable disconnected	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
3: BACnet/IP comm. (green)	Blinks when BACnet/IP data (Ethernet) are received	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
4: BACnet MSTP comm. (yellow)	Blinks when BACnet MSTP data (RS485) are received	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress
5: Not Used	OFF	Blinks quickly: Boot state Blinks very slowly ($\sim 0.5\text{Hz}$): update in progress

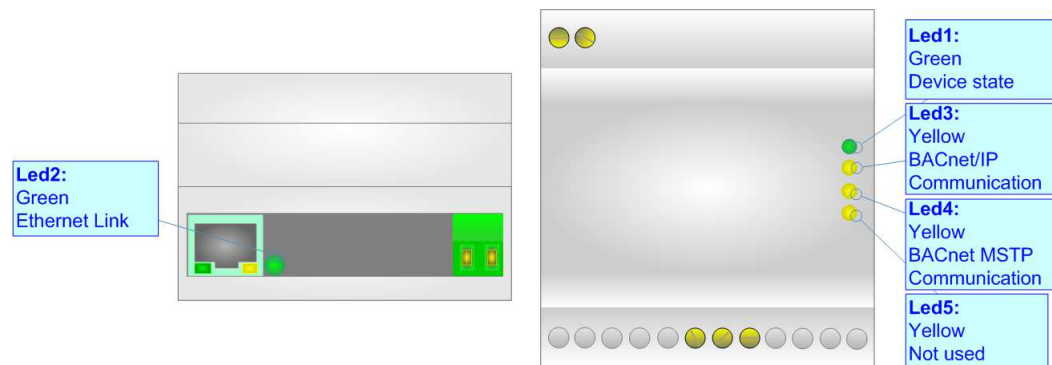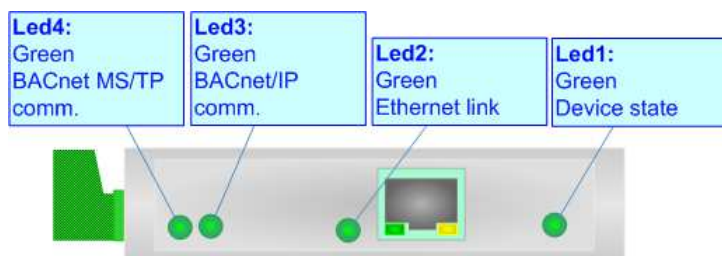

RS485:

To terminate the RS485 line with a 220Ω resistor it is necessary to put ON dip 1, like in figure.

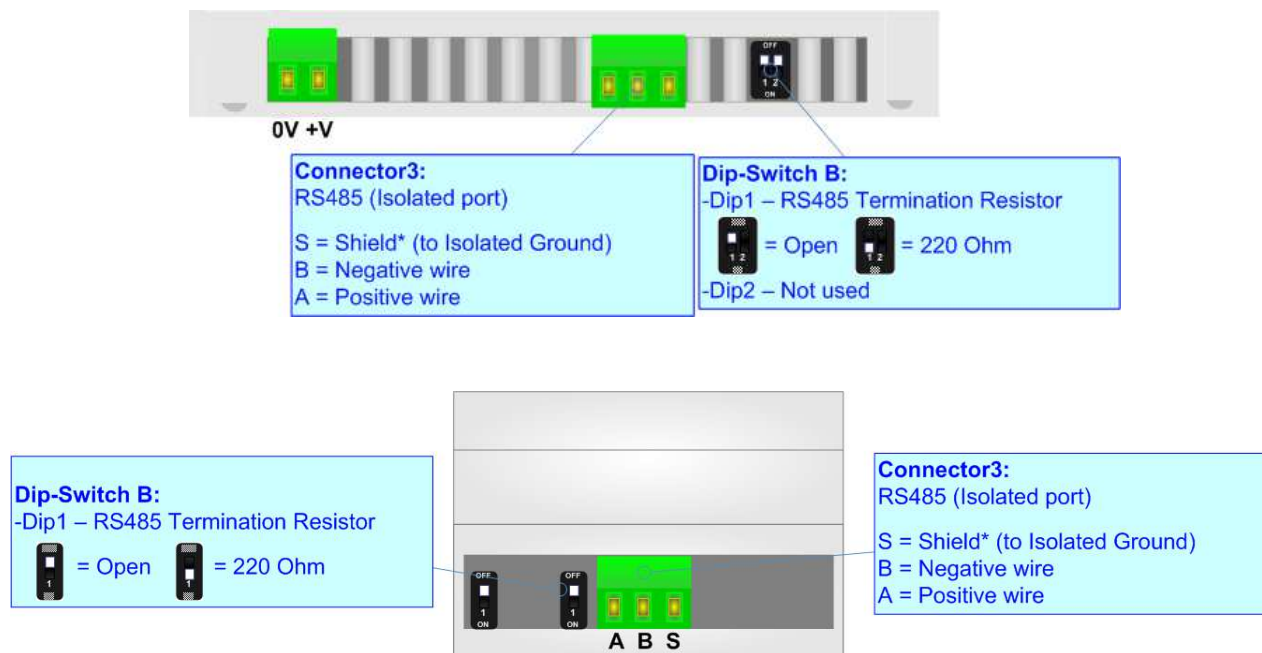


The maximum length of the cable should be 1200m (4000 feet).

Here some codes of cables:

- Belden: p/n 8132 - 2x 28AWG stranded twisted pairs conductor + foil shield + braid shield;
- Belden: p/n 82842 - 2x 24AWG stranded twisted pairs conductor + foil shield + braid shield;
- Tasker: p/n C521 - 1x 24AWG twisted pair conductor + foil shield + braid shield;
- Tasker: p/n C522 - 2x 24AWG twisted pairs conductor + foil shield + braid shield.

ETHERNET:

The BACnet/IP connection and the updating of the converters must be made using Connector5 of HD67686 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC/PLC/other is recommended the use of a cross cable.

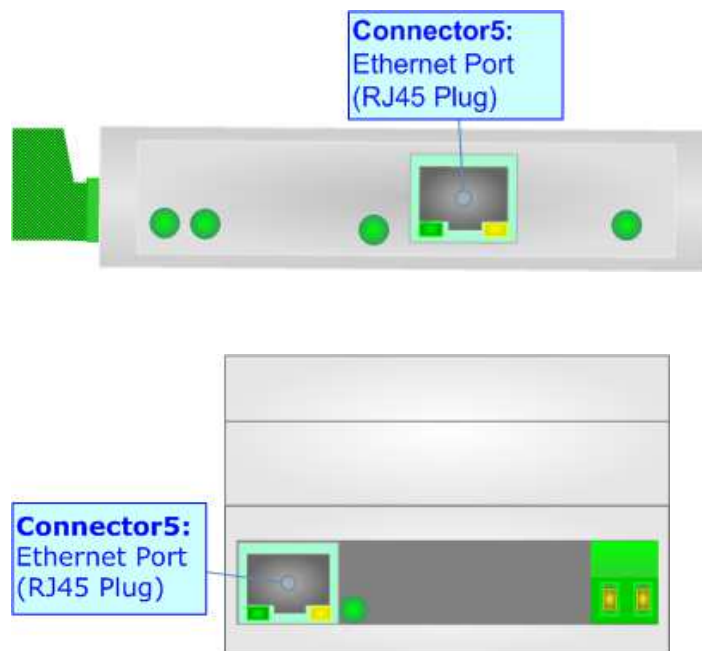

USE OF COMPOSITOR SW67686:

To configure the Converter, use the available software that runs with Windows called SW67686. It is downloadable on the site www.adfweb.com and its operation is described in this document. (*This manual is referenced to the last version of the software present on our web site*). The software works with MSWindows (XP, Vista, Seven, 8, 10 or 11; 32/64bit).

When launching the SW67686, the window below appears (Fig. 2).

**Note:**

It is necessary to have installed .Net Framework 4.



Figure 2: Main window for SW67686


NEW CONFIGURATION / OPEN CONFIGURATION:

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.




A device’s configuration can also be imported or exported:


- To clone the configurations of a programmable “BACnet/IP / BACnet MSTP - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

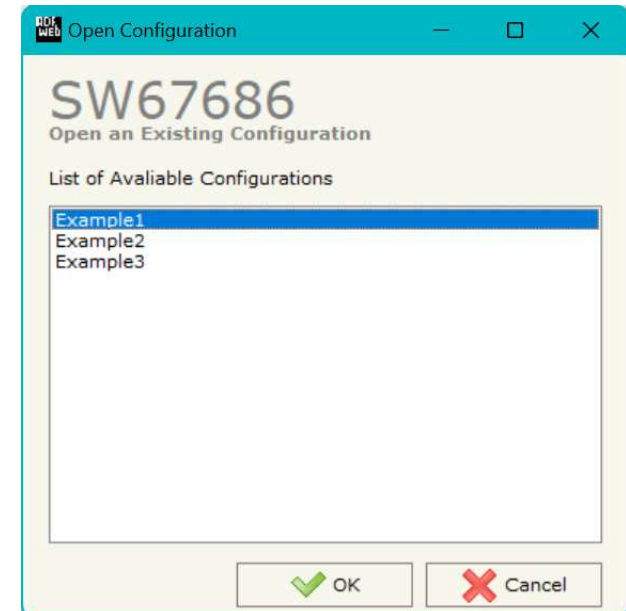

SOFTWARE OPTIONS:

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

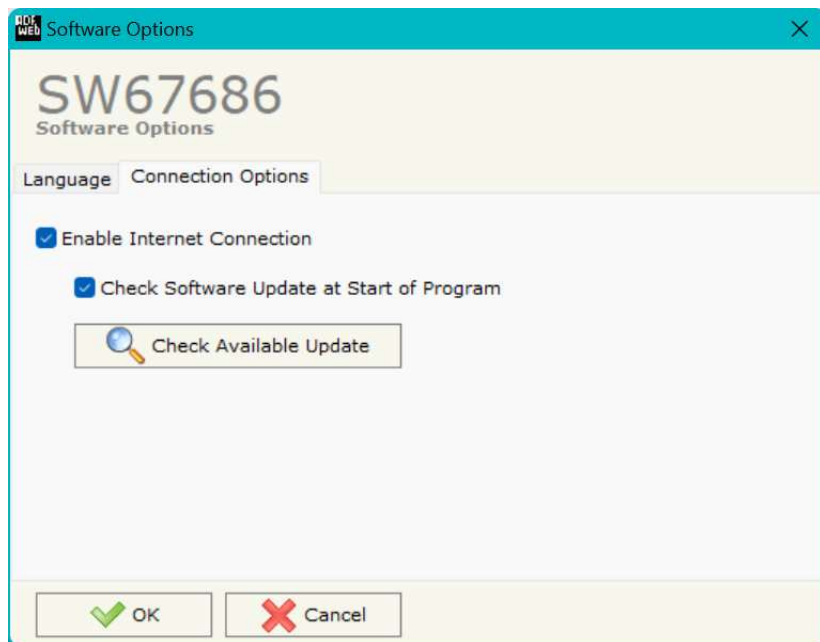

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the SW67686 check automatically if there are updatings when it is launched.

SET COMMUNICATION:

This section define the fundamental communication parameters of two buses, BACnet/IP and BACnet MSTP.

By Pressing the **"Set Communication"** button from the main window for SW67686 (Fig. 2) the window "Set Communication" appears (Fig. 3).

The means of the fields for "BACnet/IP" are:

- In the fields **"IP ADDRESS"** insert the IP address that you want to give to the Converter;
- In the fields **"SUBNET Mask"** insert the SubNet Mask;
- In the fields **"GATEWAY"** insert the default gateway that you want to use. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field **"Port"** the port number used for BACnet communication is defined. The default port used for BACnet communication is 47808, but is possible to insert any value (except 10000 and 10001);
- In the field **"BACnet Device Name"** is possible to assign a name to the BACnet node;
- In the field **"Device Instance"** is possible to assign a number to the BACnet node;
- In the field **"BACnet/IP Network"** is possible to define the number of the BACnet/IP network.

The means of the fields for the "BACnet MS/TP" section are:

- In the field **"Baudrate"** it is possible to select the baudrate of the BACnet line (1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200);
- In the field **"Parity"** it is possible to select the parity of the line (None, Odd, Even);
- In the field **"MAC Address"** is possible to define the MAC of BACnet node (from 0 to 127);
- The field **"Max Master"** specifies the highest allowable address for master nodes. The value shall be less than or equal to 127;
- The field **"Max Info Frames"** specifies the maximum number of information frames the node may send before it must pass the token;
- In the field **"MS/TP Network"** is possible to define the number of the BACnet MS/TP network.


The screenshot shows the 'Set Communication' window for device SW67686. The window has a title bar with the ADFweb logo and a close button. The main content area is titled 'Set Communication Setting' and contains two sections: 'BACnet/IP' and 'BACnet MS/TP'. The 'BACnet/IP' section includes fields for IP Address (192.168.2.134), Subnet Mask (255.255.255.0), a checkbox for Gateway (unchecked), Port (47808), BACnet Device Name (devicename1), Device Instance (189), and BACnet/IP Network (1). The 'BACnet MS/TP' section includes a dropdown for Baudrate (38400), a dropdown for Parity (NONE), fields for MAC Address (2), Max Master (127), Max Info Frames (100), and MS/TP Network (2). At the bottom are OK and Cancel buttons.

Figure 3: "Set Communication" window

Example:

The HD67686 is completely transparent and it has the functionalities of a BACnet Router.

When a BACnet/IP Master sends a request to the converter, it converts it in BACnet MS/TP. As soon as the BACnet MS/TP slave send the response, the converter converts in BACnet/IP.

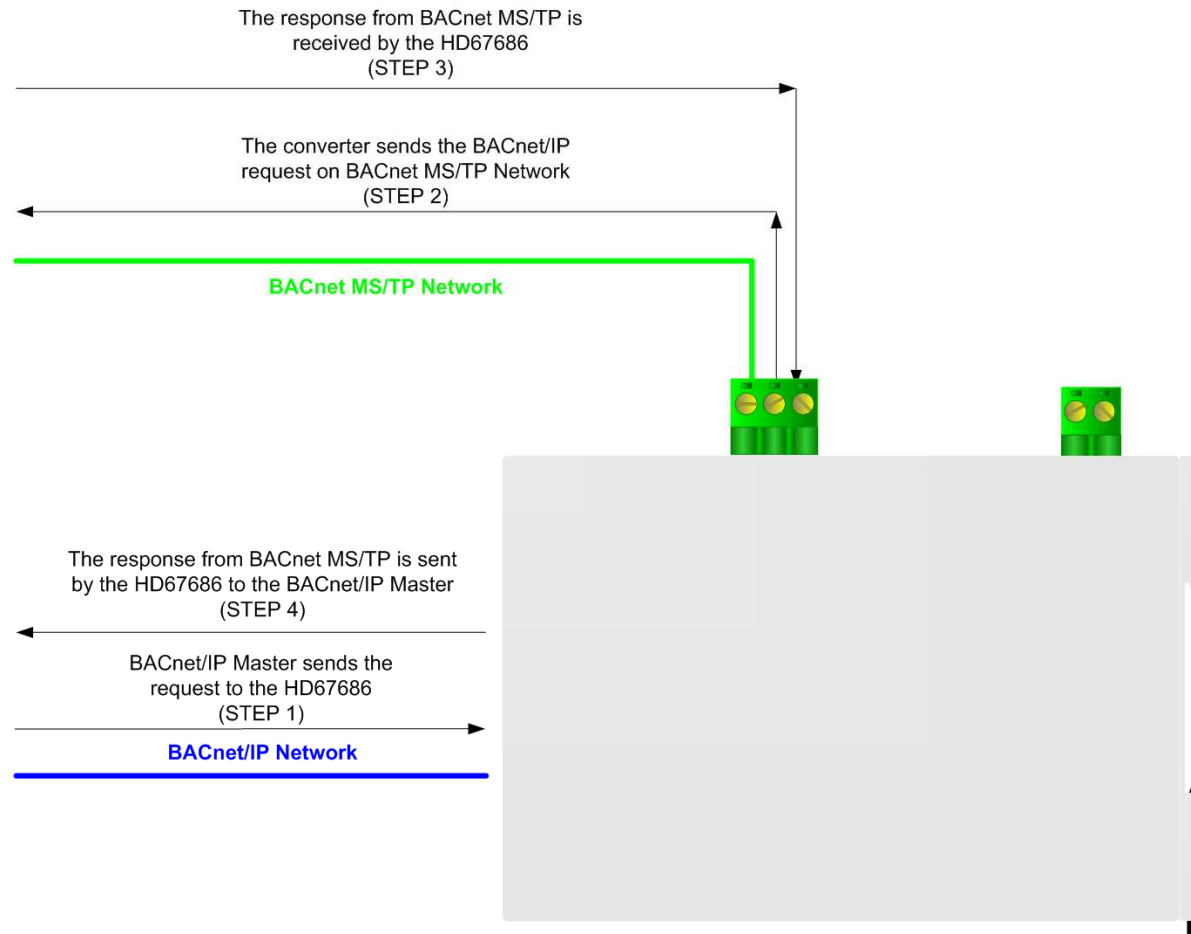

UPDATE DEVICE:

By pressing the **"Update Device"** button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary. This by using the Ethernet port.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in ON position;
- Turn ON the device
- Connect the Ethernet cable;
- Insert the IP **"192.168.2.205"**;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in OFF position;
- Turn ON the device.

If you know the actual IP address of the device, you have to use this procedure:

- Turn ON the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly updated.



Figure 4: "Update device" windows

**Note:**

When you receive the device, for the first time, you also have to update the Firmware in the HD67686 device.

**Warning:**

If Fig. 5 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- Check the LAN settings;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven, Vista, 8, 10 or 11 make sure that you have the administrator privileges;
- In case you have to program more than one device, using the "UDP Update", you have to cancel the ARP table every time you connect a new device on Ethernet. For do this you have to launch the "Command Prompt" and write the command "arp - d". Pay attention that with Windows Vista, Seven, 8, 10 or 11 you have to launch the "Command Prompt" with Administrator Rights;
- Pay attention at Firewall lock.

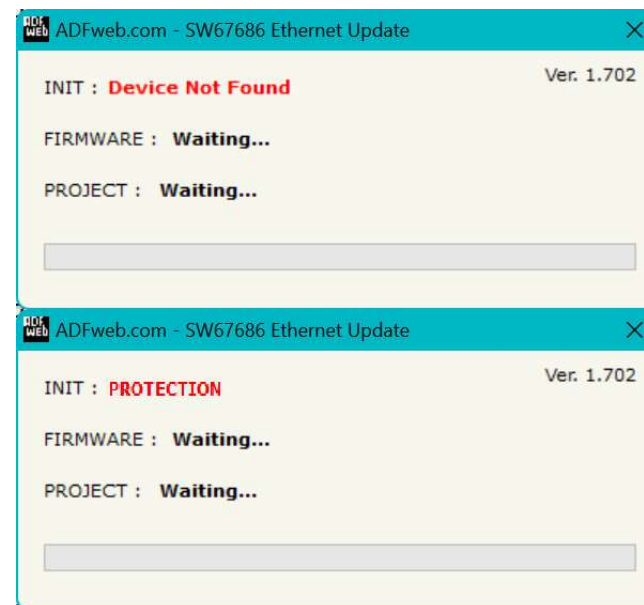


Figure 5: "Error" window

**Warning:**

In the case of HD67686 you have to use the software "SW67686": www.adfweb.com/download/filefold/SW67686.zip.

MECHANICAL DIMENSIONS:


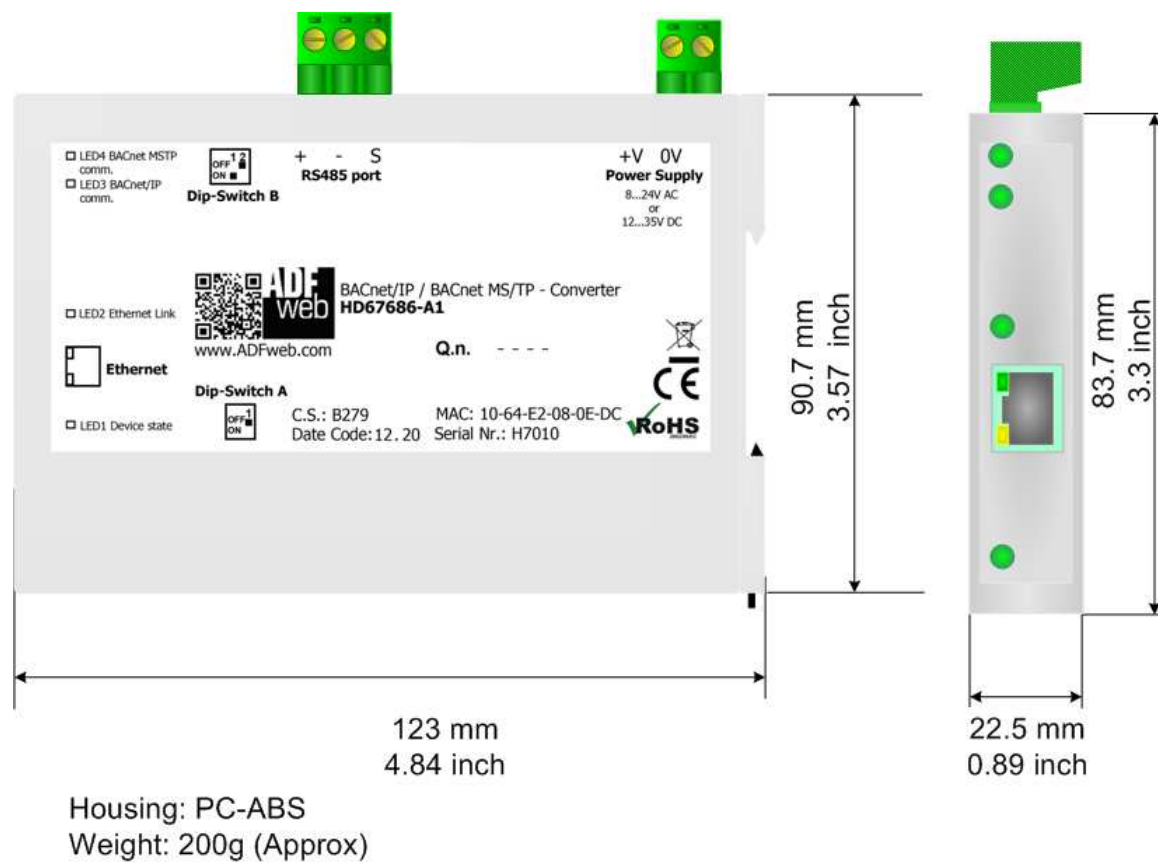


Figure 6a: Mechanical dimensions scheme for HD67686-A1

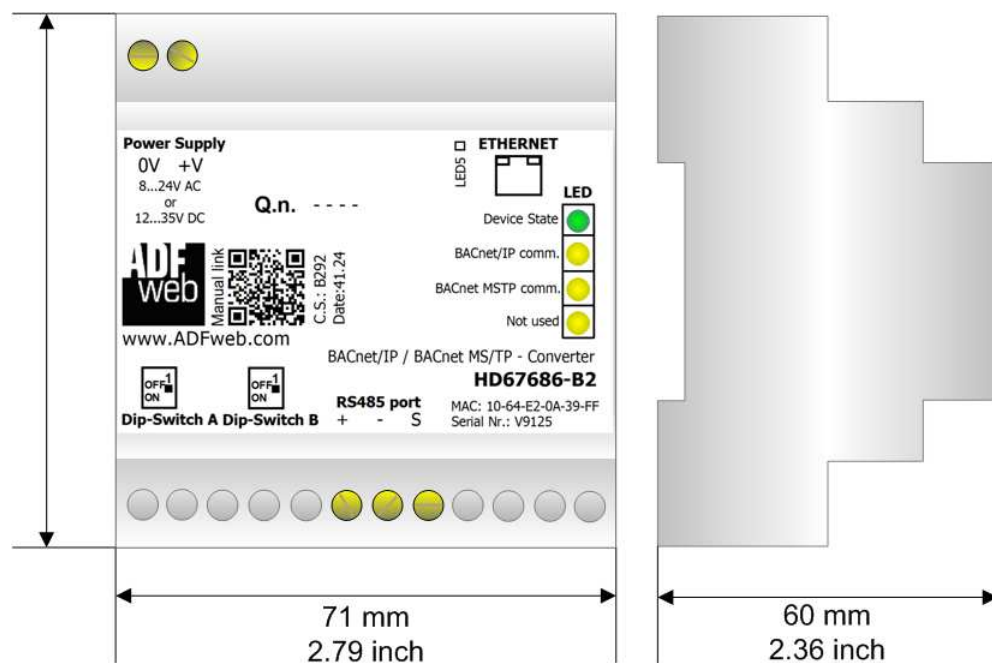

Housing: PVC
Weight: 200g (Approx)

Figure 6b: Mechanical dimensions scheme for HD67686-B2

ORDERING INFORMATION:

The ordering part number is formed by a valid combination of the following:

HD67686 - x x

Connectors Type

- 1: Removable 5mm Screw Terminal
- 2: Fixed 5mm Screw Terminal

Enclosure Type

- A: 1M, 35mm DIN Rail mounting
- B: 4M, 35mm DIN Rail mounting

Device Family

HD67686: BACnet/IP / BACnet MSTP - Router

Order Code: **HD67686-A1** - BACnet/IP / BACnet MSTP - Router

Order Code: **HD67686-B2** - BACnet/IP / BACnet MSTP - Router

ACCESSORIES:

Order Code: **AC34011** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V DC

Order Code: **AC34012** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 24 V DC

DISCLAIMER:

All technical content within this document can be modified without notice. The content of the document is under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

OTHER REGULATIONS AND STANDARDS:**WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

CE MARKING

The product conforms with the essential requirements of the applicable EC directives.

WARRANTIES AND TECHNICAL SUPPORT:

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at www.adfweb.com. Otherwise contact us at the address support@adfweb.com

RETURN POLICY:

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at www.adfweb.com. Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



ADFweb.com S.r.l.
Via Strada Nuova, 17
IT-31010 Mareno di Piave
TREVISO (Italy)
Phone +39.0438.30.91.31
Fax +39.0438.49.20.99
www.adfweb.com

