

## EXTERNAL LINKS

HD67031-B2-xxx



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67031\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67031_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67031\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67031_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67031.zip](http://www.adfweb.com/download/filefold/SW67031.zip)

**HD67031-B2-xxx**

# BOX SHEET

**M-Bus Analyzer - Scanner - Sniffer**

Box Sheet for Order Code: HD67031-B2-xxx  
Document code: BS67031-B2  
V2.002




**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67031-B2-xxx

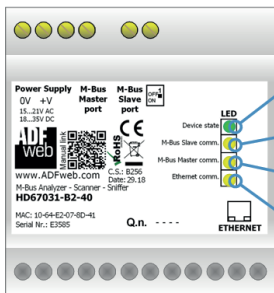


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
M-Bus slave comm.

**Led3:**  
Yellow  
M-Bus master comm.

**Led4:**  
Yellow  
Ethernet comm.

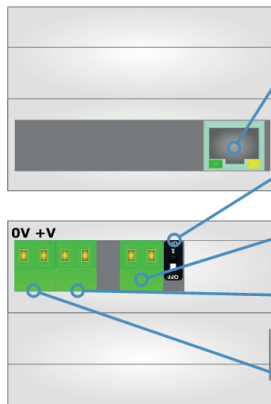

**Connector2:**  
Ethernet Port  
(RJ45 Plug)

**Dip-Switch A:**  
-Dip1 – Functioning Mode



= Normal Mode



= Boot Mode

**Connector4:**  
Unpolarized  
M-Bus slave

**Connector3:**  
Unpolarized  
M-Bus master

**Connector1:**  
Power Supply

0V = Ground  
+V = Positive wire

V AC: min 15V ; max 21V  
V DC: min 18V ; max 35V

Order code: HD67031-B2-xxx