

BOX SHEET

RS232 / Ethernet - Converter

Box Sheet for Order code: HD67038-2-B2
Document code: BS67038-2-B2
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

QR of Manual

[www.adfweb.com/download/
filefold/MN67038_ENG.pdf](http://www.adfweb.com/download/filefold/MN67038_ENG.pdf)

QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67038-2-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67038-2-B2_ENG.pdf)

QR of Software

[www.adfweb.com/download/
filefold/SW67038.zip](http://www.adfweb.com/download/filefold/SW67038.zip)

HD67038-2-B2

CONNECTION SCHEME

Order code: HD67038-2-B2

Connector 4:



Port RS232 (D-SUB9-Male)
(Isolated Port)

PIN2 = RX
PIN3 = TX
PIN5 = GND* (to Isolated Ground)

Used for:

- Programming Port
- Modbus on RS232

To connect the device to the COM port of a PC in order to set it you have to use the programming cable AC34107 or a cable made as showed here:

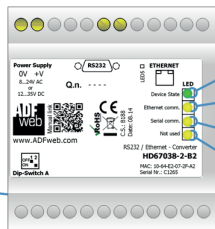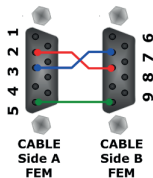


Led1:
Green
Device state

Led2:
Yellow
Ethernet comm.

Led4:
Yellow
Serial comm.

Led5:
Yellow
Not used

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

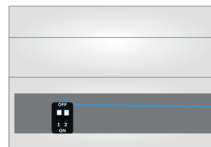

Dip-Switch A:
-Dip1 – Must be at ON
-Dip2 – Functioning Mode
 = Normal = Boot

Led3:
Green
Ethernet Link

Connector5:
Ethernet Port
(RJ45 Plug)



Order code: HD67038-2-B2