

## Gateway – Modbus Slave to DeviceNet Slave

To obtain the complete manual please go to

[www.adfweb.com/download](http://www.adfweb.com/download)


or

[www.adfweb.com/download/filefold/ModbusS\\_to\\_DeviceNetS\\_MN67138\\_ENG.pdf](http://www.adfweb.com/download/filefold/ModbusS_to_DeviceNetS_MN67138_ENG.pdf)

To obtain the new version of this box sheet please go to

[http://www.adfweb.com/download/filefold/BS67138-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67138-A1_ENG.pdf)

### CONNECTION SCHEME:

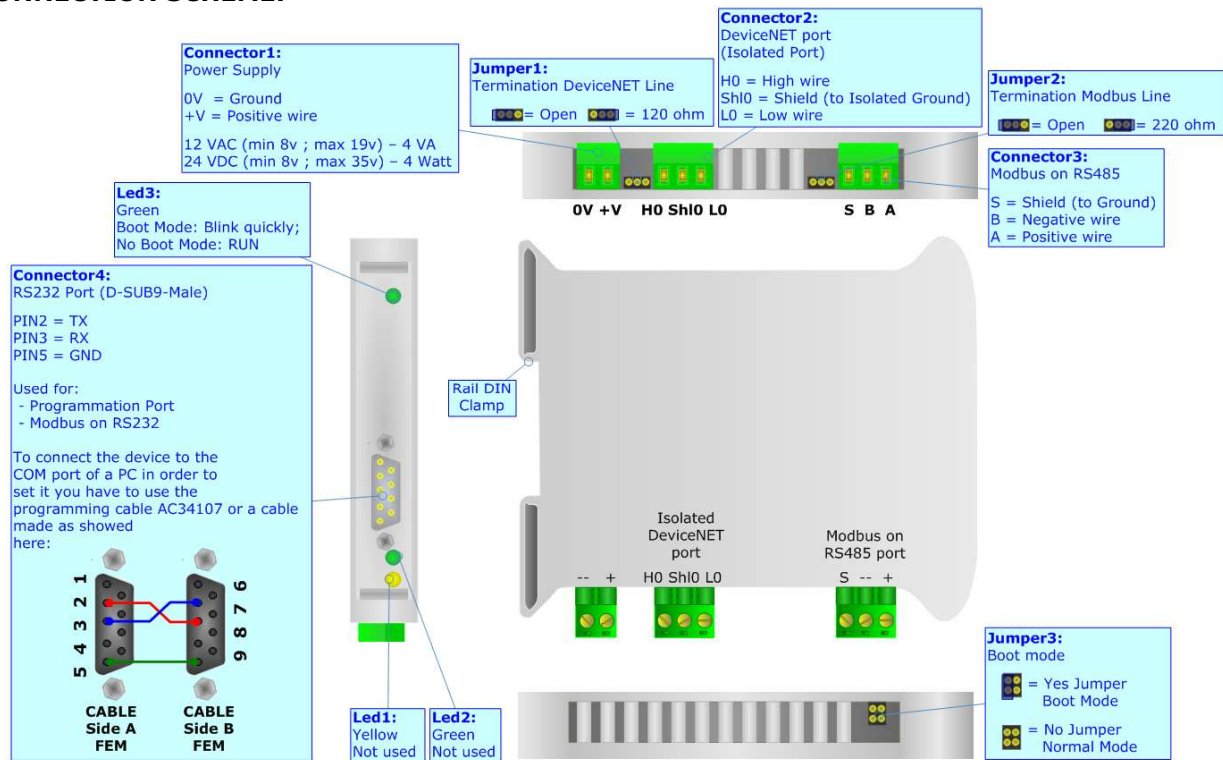

### THE CONFIGURATION SOFTWARE:

For setting up the device you need a the software named SW67138. To obtain this software please go to

<http://www.adfweb.com/download>


or

<http://www.adfweb.com/download/filefold/SW67138.zip>

### CHARACTERISTICS OF THE CABLES:

The connection from RS232 socket to a serial port must be made with a NULL MODEM cable (a serial cable where the pins 2 and 3 are crossed).

It is recommended that the RS232C Cable not exceed 15 meters.

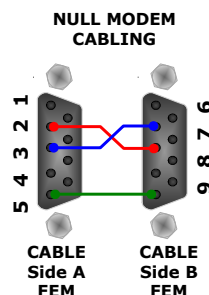

ADFweb.com s.r.l.  
www.adfweb.com  
info@adfweb.com  
support@adfweb.com