



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67139\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67139_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67139-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67139-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67139.zip](http://www.adfweb.com/download/filefold/SW67139.zip)

**HD67139-B2**

# BOX SHEET

## DeviceNet Slave / Modbus TCP Master Converter

Box Sheet for Order code: HD67139-B2  
Document code: BS67139-B2  
V1.001




**ADFweb.com srl**  
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67139-B2

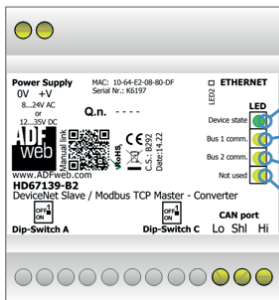

**Led1:**  
Green  
Device state

**Led3:**  
Yellow  
Modbus comm.

**Led4:**  
Yellow  
DeviceNet comm.

**Led5:**  
Yellow  
Not used

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V



**Dip-Switch A:**  
-Dip1 – Functioning Mode  
 = Normal  = Boot

**Dip-Switch C:**  
-Dip1 – CAN Termination Resistor  
 = Open  = 120 Ohm

**Connector2:**  
CAN port (Isolated port)  
Hi = High wire  
Shl = Shield\* (to Isolated Ground)  
Lo = Low wire



**Connector5:**  
Ethernet Port  
(RJ45 Plug)

**Led2:**  
Green  
Ethernet Link