



QR of Manual

[www.adfweb.com/download/
filefold/MN67151_ENG.pdf](http://www.adfweb.com/download/filefold/MN67151_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67151-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67151-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67151.zip](http://www.adfweb.com/download/filefold/SW67151.zip)

HD67151-A1

BOX SHEET

**DeviceNet Master / Modbus Slave
Converter**

Box Sheet for Order code: HD67151-A1
Document code: BS67151-A1
V1.002

 


ADFweb.com srl
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com



CONNECTION SCHEME

Order code: HD67151-A1



Jumper3:
Functioning Mode

= Yes Jumper
Boot Mode = No Jumper
Normal Mode

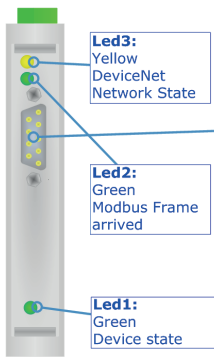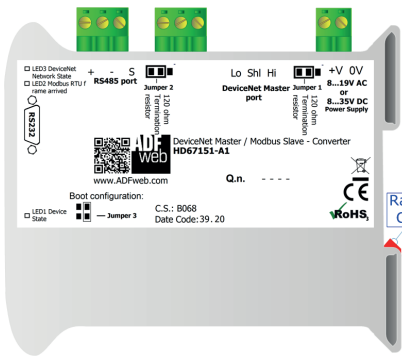


Connector4:
Port RS232 (D-SUB9-Male)

PIN2 = RX
PIN3 = TX
PIN5 = GND

Used for:
- Programmation Port

 To connect the device to the COM port of a PC in order to set it you have to use the programming cable AC34107, or a cable made as showed here:



Connector2:
RS485 1 port

S = Shield (to Ground)
B = Negative wire
A = Positive wire

Jumper2:
Termination RS485 1

= Open = 120 ohm

Connector3:
RS485 0 port
(Isolated)

S = Shield (to Isolated Ground)
B = Negative wire
A = Positive wire

Connector1:
Power Supply port

0V = Ground
+V = Positive wire

V AC: min 8V ; max 19V
V DC: min 8V ; max 35V

Jumper2:
Termination RS485 0

= Open = 220 ohm

Order code: HD67151-A1