

## EXTERNAL LINKS

HD674-A008-4-E4X-xxx



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN674-A008\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN674-A008_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS674-A008-4-E4X\\_  
ENG.pdf](http://www.adfweb.com/download/filefold/BS674-A008-4-E4X_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW674-A008.zip](http://www.adfweb.com/download/filefold/SW674-A008.zip)

# BOX SHEET

## Modbus Master / SNMP Agent Converter

Box Sheet for Order code: HD674-A008-4-E4x-xxx  
Document code: BS674-A008-4-E4x  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

**HD674-A008-4-E4X-xxx**

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD674-A008-4-E4X-xxx

## Connector3:

RS485 port



+ = Positive wire

- = Negative wire

Shl = Shield (to Isolated Ground)

## Connector2:

Ethernet Port  
(RJ45 Plug)

## Connector1:

Power Supply port




0V = Ground

+V = Positive wire

V AC: min 8V ; max 26V

V DC: min 10V ; max 40V

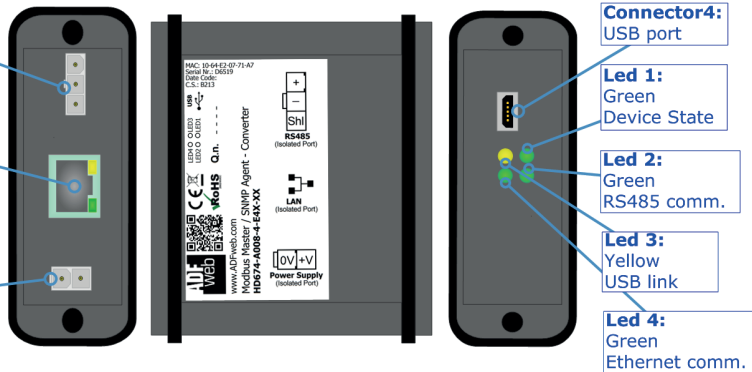

Order code: HD674-A008-4-E4X-xxx