

## Modbus Slave / SNMP Manager - Converter

To obtain the complete manual please go to

[www.adfweb.com/download/filefold/MN674-A010\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN674-A010_ENG.pdf)

To obtain the new version of this box sheet please go to

[www.adfweb.com/download/filefold/BS674-A010-4-E4x\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS674-A010-4-E4x_ENG.pdf)

### CONNECTION SCHEME:



### CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW674-A010.

To obtain this software please go to

[www.adfweb.com/download/filefold/SW674-A010.zip](http://www.adfweb.com/download/filefold/SW674-A010.zip)

ADFweb.com s.r.l.  
 www.adfweb.com  
 info@adfweb.com  
 support@adfweb.com

Manual



Box-Sheet



Software

