

## EXTERNAL LINKS

HD674-A025-E4x-xxx



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN674-A025-E4x\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN674-A025-E4x_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS674-A025-E4x\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS674-A025-E4x_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW674-A025.zip](http://www.adfweb.com/download/filefold/SW674-A025.zip)

# BOX SHEET

DMX / Ethernet – Converter

Box Sheet for Order code: HD674-A025-E4x-xxx  
Document code: BS674-A025-E4x-xxx  
V1.000



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD674-A025-E4x-xxx

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD674-A025-E4x-xxx

## Connector3:

RS485 port

+ = Positive wire  
- = Negative wire  
SHl = Shield (to Isolated Ground)



## Connector2: Ethernet Port (RJ45 Plug)


## Connector1:

Power Supply port

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 26V

V DC: min 10V ; max 40V

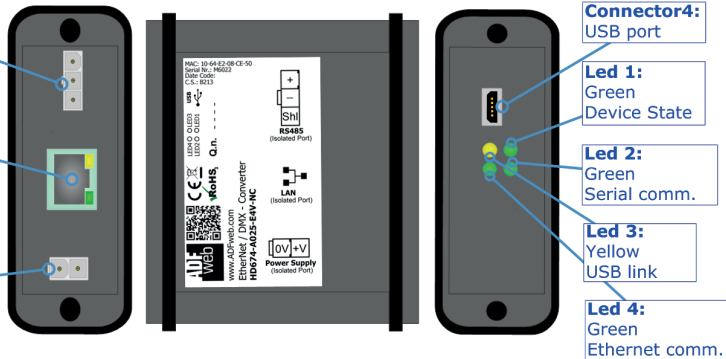

Order code: Order code: HD674-A025-E4x-xxx