

EXTERNAL LINKS

HD67508-485-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67508_ENG.pdf](http://www.adfweb.com/download/filefold/MN67508_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67508-485_ENG.pdf](http://www.adfweb.com/download/filefold/BS67508-485_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67508.zip](http://www.adfweb.com/download/filefold/SW67508.zip)

HD67508-485-A1

BOX SHEET

**Modbus TCP Slave / Modbus Master
Converter**

Box Sheet for Order code: HD67508-485-A1
Document code: BS67508-485-A1
V2.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com


CONNECTION SCHEME

Order code: HD67508-485-A1


Dip-Switch A:

-Dip1 – Functioning Mode

 = Normal  = Boot

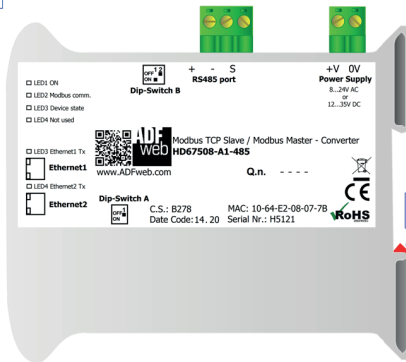

Rail DIN Clamp

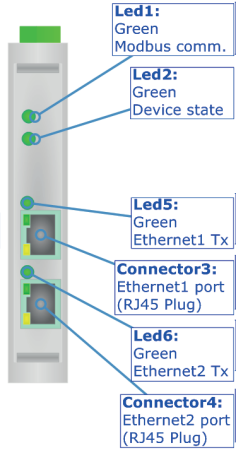

Dip-Switch B:

-Dip1 – RS485 Termination Resistor

 = Open  = 120 Ohm

-Dip2 – Not used

Connector2:

RS485 (Isolated port)

S = Shield* (to Isolated Ground)
B = Negative wire
A = Positive wire

Connector1:

Power Supply port

0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67508-485-A1