

EXTERNAL LINKS

HD67518-B2



QR of Manual

[www.adfweb.com/download/
filefold/MN67518_ENG.pdf](http://www.adfweb.com/download/filefold/MN67518_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67518-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67518-B2_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67518.zip](http://www.adfweb.com/download/filefold/SW67518.zip)

HD67518-B2

BOX SHEET

DMX / Modbus Master - Converter

Box Sheet for Order code: HD67518-B2
Document code: BS67518-B2
V1.000



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67518-B2

Dip-Switch B:

-Dip1 – Termination Modbus line



= Open



= 120 ohm

Dip-Switch A:


-Dip1 – Functioning Mode



= Normal Mode



= Boot Mode

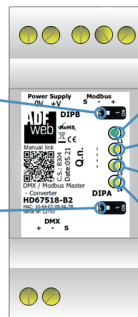

Led1:

Green
Device state

Led2:

Yellow
Modbus comm.

Led3:

Yellow
DMX comm.

Led4:

Yellow
Not used

Connector2:

Ethernet Port
(RJ45 Plug)

Led5:

Green
Link Ethernet

Connector3:

DMX port

S = Shield (to Isolated Ground)

- = Negative wire

+ = Positive wire

Connector4:

Modbus port

S = Shield (to Isolated Ground)

- = Negative wire

+ = Positive wire

Connector1:

Power Supply

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67518-B2