

PROFIBUS Slave / Ethernet - Converter


To obtain the complete manual please go to

www.adfweb.com/download/filefold/MN67576_ENG.pdf

To obtain the new version of this box sheet please go to

www.adfweb.com/download/filefold/BS67576-A1_ENG.pdf

CONNECION SCHEME

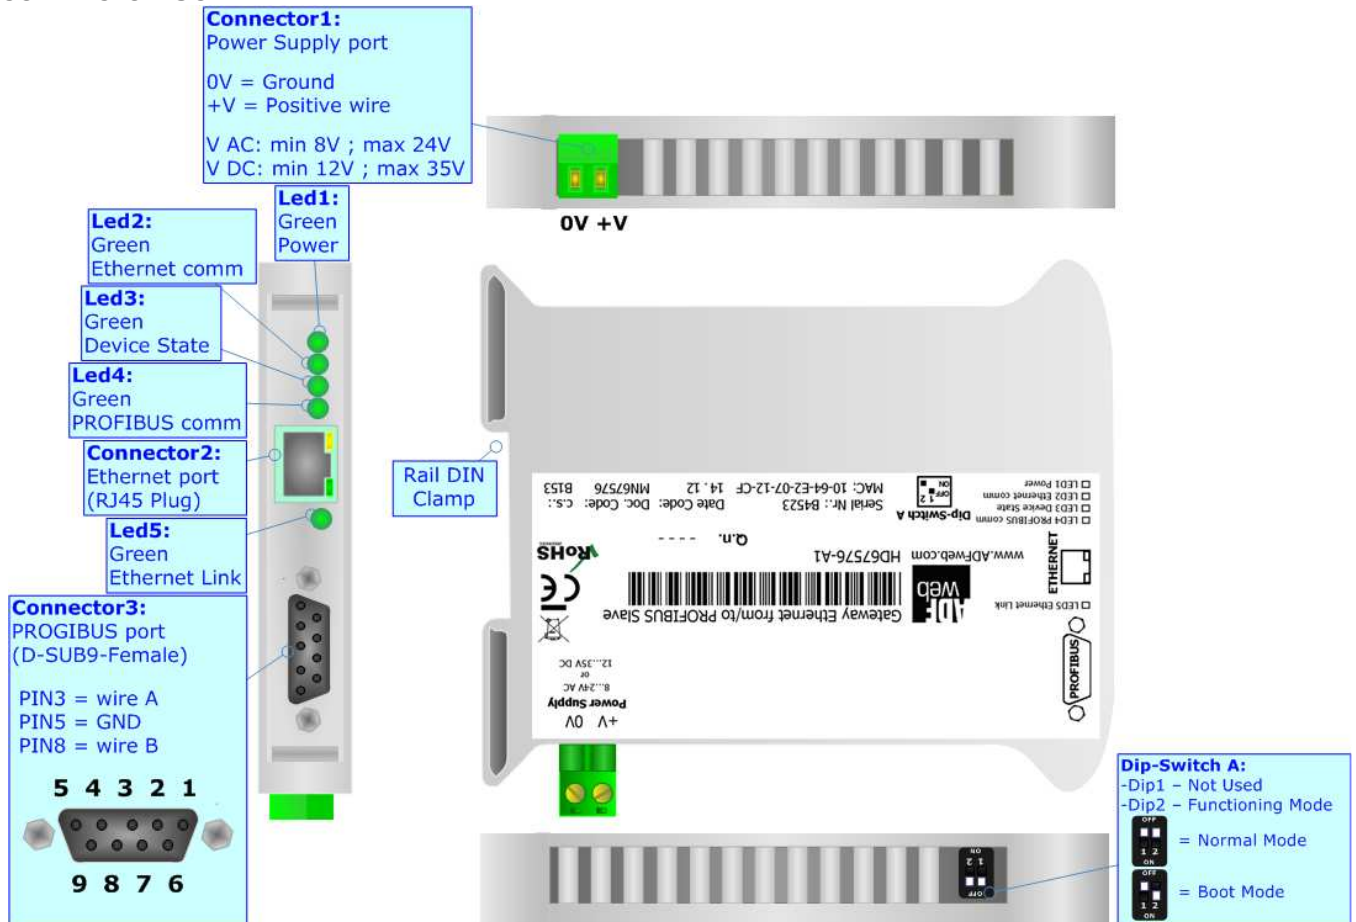

THE CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67576. To obtain software please go to

www.adfweb.com/download/filefold/SW67576.zip

ADFweb.com s.r.l.
www.adfweb.com
info@adfweb.com
support@adfweb.com