

## EtherNet/IP / PROFIBUS Slave - Converter

To obtain the complete manual please go to

[www.adfweb.com/download/filefold/MN67594\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67594_ENG.pdf)

To obtain the new version of this box sheet please go to

[www.adfweb.com/download/filefold/BS67594-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67594-A1_ENG.pdf)

### CONNECTION SCHEME:

#### Dip-Switch A:


- Dip1 - Must be at ON
- Dip2 - Functioning Mode



#### Connector2:

PROFIBUS port (Isolated port)  
(D-SUB9-Female)

- PIN3 = wire A
- PIN5 = Shield\*\* (to Isolated Ground)
- PIN8 = wire B

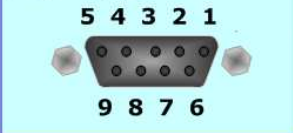

**Led1:**  
Green  
ON

**Led2:**  
Green  
RUN

**Led3:**  
Green  
PROFIBUS

**Led4:**  
Green  
Not Used

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 port  
(RJ45 Plug)

**Connector1:**  
Power Supply port

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

### CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67594.

To obtain this software please go to

[www.adfweb.com/download/filefold/SW67594.zip](http://www.adfweb.com/download/filefold/SW67594.zip)

ADFweb.com s.r.l.  
www.adfweb.com  
info@adfweb.com  
support@adfweb.com

Manual



Box-Sheet



Software

