



QR of Manual

[www.adfweb.com/download/
filefold/MN67601_ENG.pdf](http://www.adfweb.com/download/filefold/MN67601_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67601-232-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67601-232-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67601.zip](http://www.adfweb.com/download/filefold/SW67601.zip)

HD67601-232-A1

BOX SHEET

PROFINET / Serial - Converter

Box Sheet for Order code: HD67601-232-A1
Document code: BS67601-232-A1
V1.003



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67601-232-A1

Dip-Switch A:


-Dip1 - Functioning Mode



= Normal



= Boot

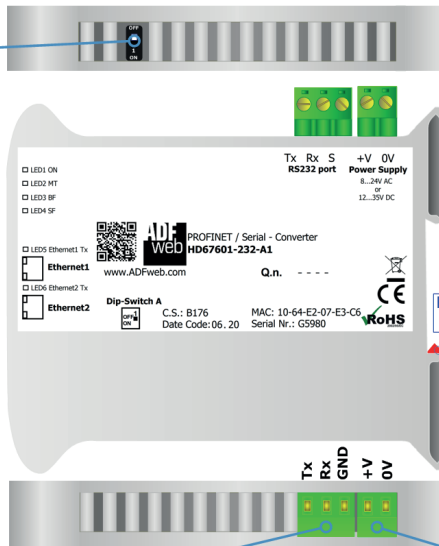

Led1:

Green
ON

Led2:

Yellow
MT

Led3:

Red
BF

Led4:

Red
SF

Connector3:

Ethernet1 Port
(RJ45 Plug)

Led6:

Green
Ethernet2 Tx

Connector4:

Ethernet2 Port
(RJ45 Plug)

Rail DIN
Clamp

Connector2:

RS232 (Isolated port)

GND = Ground* (to Isolated
Ground)

Rx = Rx line

Tx = Tx line

Connector1:

Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max
24V

V DC: min 12V ; max
35V

Order code: HD67601-232-A1