



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67602\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67602_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67602-485-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67602-485-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67602.zip](http://www.adfweb.com/download/filefold/SW67602.zip)

**HD67602-485-A1**

# BOX SHEET

## PROFINET / Modbus Master - Converter

Box Sheet for Order code: HD67602-485-A1  
Document code: BS67602-485-A1  
V1.003



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67602-485-A1

## Dip-Switch A:

 

-Dip1 – Functioning Mode



= Normal



= Boot

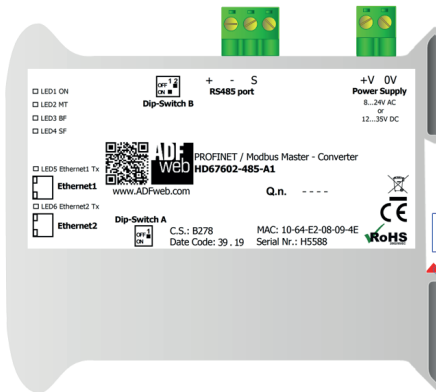

## Led1:

Green  
ON

## Led2:

Yellow  
MT

## Led3:

Red BF

## Led4:

Red SF

## Connector3:

Ethernet1 Port  
(RJ45 Plug)

## Led6:

Green  
Ethernet2 Tx

## Connector4:

Ethernet2 Port  
(RJ45 Plug)

Rail DIN  
Clamp

## Dip-Switch B:

-Dip1 – RS485 Termination Resistor



= Open



= 120 Ohm

-Dip2 – Not used

## Connector2:

RS485 (Isolated port)

S = Shield\* (to Isolated Ground)

B = Negative wire

A = Positive wire

## Connector1:

Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67602-485-A1