

# NMEA 0183 / Modbus TCP Slave - Converter


To obtain the complete manual please go to:

[www.adfweb.com/download/filefold/MN67617\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67617_ENG.pdf)

To obtain the new version of this box sheet please go to:

[www.adfweb.com/download/filefold/BS67617-422-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67617-422-A1_ENG.pdf)

## CONNECTION SCHEME:

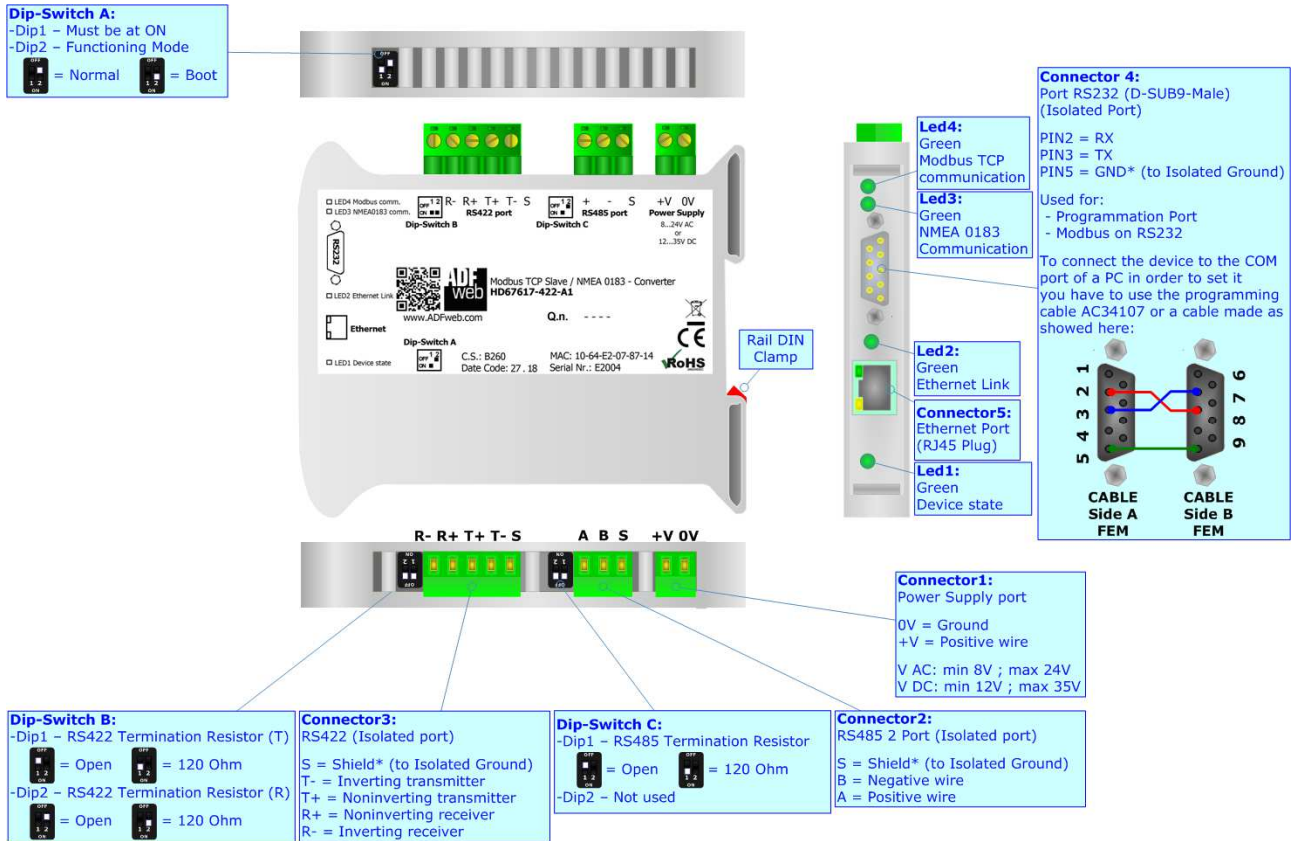

## CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67617. To obtain this software please go to:

[www.adfweb.com/download/filefold/SW67617.zip](http://www.adfweb.com/download/filefold/SW67617.zip)

ADFweb.com s.r.l.  
 www.adfweb.com  
 support@adfweb.com

Manual



Box-Sheet



Software

