



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67620\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67620_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67620-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67620-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67620.zip](http://www.adfweb.com/download/filefold/SW67620.zip)

**HD67620-A1**

# BOX SHEET

**S7comm / IEC61850 Server - Converter**

Box Sheet for Order code: HD67620-A1  
Document code: BS67620-A1  
V1.000



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67620-A1

## Dip-Switch A:


-Dip1 - Functioning Mode



= Normal



= Boot

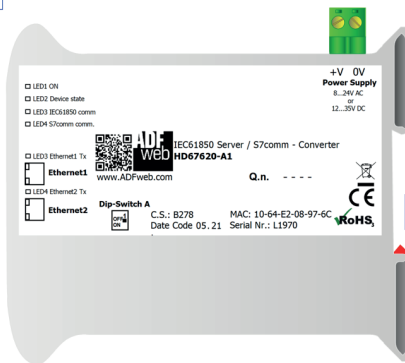

Rail DIN  
Clamp

**Led1:**  
Green  
ON

**Led2:**  
Green  
Device State

**Led3:**  
Green  
IEC61850 comm.

**Led4:**  
Green  
S7comm comm.

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 port  
(RJ45 Plug)

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67620-A1