



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67660\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67660_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67660-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67660-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67660.zip](http://www.adfweb.com/download/filefold/SW67660.zip)

**HD67660-A1**

# BOX SHEET

**PROFINET / EtherNet/IP Slave - Converter**

Box Sheet for Order code: HD67660-A1  
Document code: BS67660-A1  
V1.002



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67660-A1

## Dip-Switch A:

-Dip1 – Functioning Mode



= Normal



= Boot



- LED1 ON
- LED2 MT
- LED3 BF
- LED4 SF

- LED5 Ethernet1 Tx
- ETHERNET 1

- LED6 Ethernet2 Tx
- ETHERNET 2

### Dip-Switch A



Date Code 31. 22

C.S.: B278

MAC: 10-64-E2-09-46-F3

Serial Nr.: P6905

PROFINET / Ethernet/IP - Converter  
HD67660-A1  
www.ADPweb.com  
Q.n. ---



+V 0V

**Led1:**  
Green  
ON

**Led2:**  
Yellow  
MT

**Led3:**  
Red  
BF

**Led4:**  
Red  
SF

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 port  
(RJ45 Plug)

Rail DIN  
Clamp

## Connector1:

Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67660-A1