

## EXTERNAL LINKS

HD67664-A1



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67664\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67664_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67664-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67664-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67664.zip](http://www.adfweb.com/download/filefold/SW67664.zip)

**HD67664-A1**

# BOX SHEET

**EtherNet/IP / Modbus TCP master  
Converter**

Box Sheet for Order code: HD67664-A1  
Document code: BS67664-A1  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67664-A1

## Dip-Switch A:


-Dip1 - Functioning Mode



= Normal



= Boot

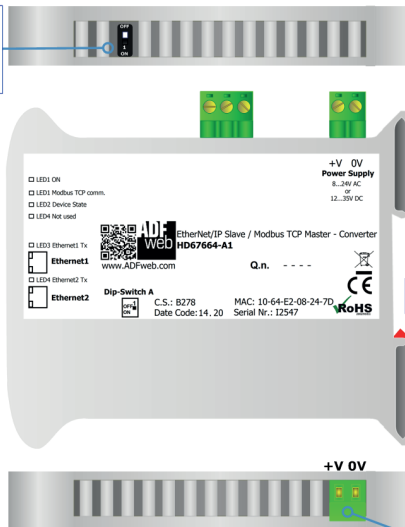

LED1 ON  
 LED1 Modbus TCP comm.  
 LED2 Device State  
 LED4 Not used  
 LED3 Ethernet1 Tx  
 Ethernet1  
 LED4 Ethernet2 Tx  
 Ethernet2

**Dip-Switch A**

C.S.: B278      MAC: 10-64-E2-08-24-7D  
Date Code: 14\_20      Serial Nr.: I2547

**Power Supply**  
8...24V AC  
or  
12...35V DC

EtherNet/IP Slave / Modbus TCP Master - Converter  
**HD67664-A1**  
Q.n. - - - -

www.ADFweb.com

RoHS

**Led1:**  
Green  
Modbus TCP comm.

**Led2:**  
Green  
Device state

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 port  
(RJ45 Plug)

Rail DIN  
Clamp

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67664-A1