



QR of Manual

[www.adfweb.com/download/
filefold/MN67670_ENG.pdf](http://www.adfweb.com/download/filefold/MN67670_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67670-IP-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67670-IP-B2_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67670.zip](http://www.adfweb.com/download/filefold/SW67670.zip)

HD67670-IP-B2

BOX SHEET

DMX / BACnet MS/TP Slave Converter

Box Sheet for Order code: HD67670-IP-B2
Document code: BS67670-IP-B2
V1.001




ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67670-IP-B2

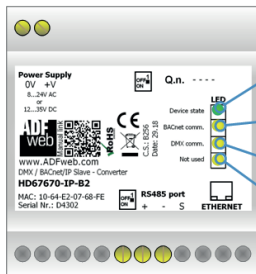


Led1:
Green
Device state

Led2:
Yellow
BACnet comm.

Led3:
Yellow
DMX comm.

Led4:
Yellow
Not used

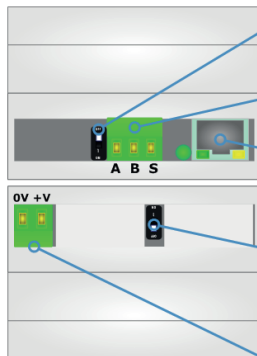

Dip-Switch B:

-Dip1 – Termination RS485 line



= Open



= 120 ohm

Connector6:

RS485 port

S = Shield (to Isolated Ground)

B = Negative wire

A = Positive wire

Connector3:

Ethernet Port
(RJ45 Plug)

Dip-Switch A:

-Dip1 – Functioning Mode



= Normal Mode



= Boot Mode

Connector1:

Power Supply

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67670-IP-B2