

EXTERNAL LINKS

HD67672-IP-2-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67672_ENG.pdf](http://www.adfweb.com/download/filefold/MN67672_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67672-IP-2_A1_
ENG.pdf](http://www.adfweb.com/download/filefold/BS67672-IP-2_A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67672.zip](http://www.adfweb.com/download/filefold/SW67672.zip)

HD67672-IP-2-A1

BOX SHEET

**BACnet/IP Slave / Modbus Slave
Converter**

Box Sheet for Order code: HD67672-IP-2-A1
Document code: BS67672-IP-2-A1
V1.002



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67672-IP-2-A1

Dip-Switch A:
-Dip1 – Functioning Mode
☐ = Normal ☐ = Boot

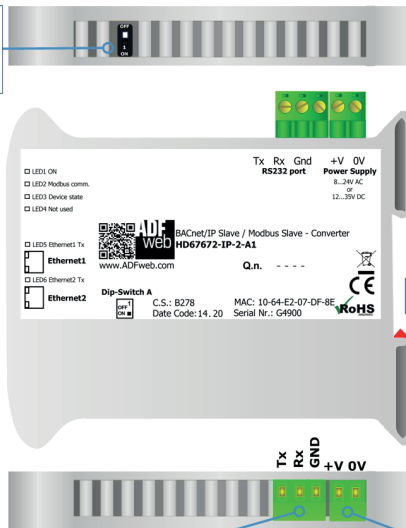

Connector2:
RS232 (Isolated port)
GND = Ground* (to Isolated Ground)
Rx = Rx line
Tx = Tx line

Rail DIN
Clamp

Led1:
Green
ON

Led2:
Green
Modbus comm.

Led3:
Green
Device state

Led4:
Green
Not used

Led5:
Green
Ethernet1 Tx

Connector3:
Ethernet1 port
(RJ45 Plug)

Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 port
(RJ45 Plug)

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67672-IP-2-A1