



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67681\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67681_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67681-MSTP-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67681-MSTP-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67681.zip](http://www.adfweb.com/download/filefold/SW67681.zip)

**HD67681-MSTP-A1**

# BOX SHEET

**BACnet/MSTP / DeviceNet Slave – Converter**

Box Sheet for Order code: HD67681-MSTP-A1  
Document code: BS67681-MSTP-A1  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Marenco di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67681-MSTP-A1

## Dip-Switch A:

-Dip1 - Functioning Mode



= Normal



= Boot



## Led4:

Green  
DeviceNet comm.

## Led3:

Green  
BACnet comm.

## Led2:

Green  
Ethernet2 Tx

## Connector5:

Ethernet1 Port  
(RJ45 Plug)

## Led1:

Green  
Ethernet2 Tx

## Dip-Switch B:

-Dip1 - RS485 Termination Resistor




= Open



= 220 Ohm

-Dip2 - Not used

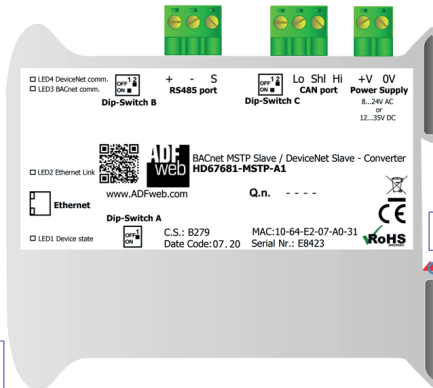

## Connector3:

RS485 (Isolated port)  
S = Shield\* (to Isolated Ground)  
B = Negative wire  
A = Positive wire

## Dip-Switch C:

-Dip1 - CAN Termination Resistor  
-Dip2 - Not used



= Open



= 120 Ohm

## Connector2:

CAN port (Isolated port)  
Hi = High wire  
Shl = Shield\* (to Isolated Ground)  
Lo = Low wire

## Connector1:

Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67681-MSTP-A1