



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67682\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67682_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67682-IP-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67682-IP-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67682.zip](http://www.adfweb.com/download/filefold/SW67682.zip)

**HD67682-IP-A1**

# BOX SHEET

**BACnet/IP slave / EtherNet/IP slave  
Converter**

Box Sheet for Order code: HD67682-IP-A1  
Document code: BS67682-IP-A1  
V1.001



**ADFweb.com srl**


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67682-IP-A1

**Dip-Switch A:**  
-Dip1 - Functioning Mode  
☐ = Normal    ☐ = Boot

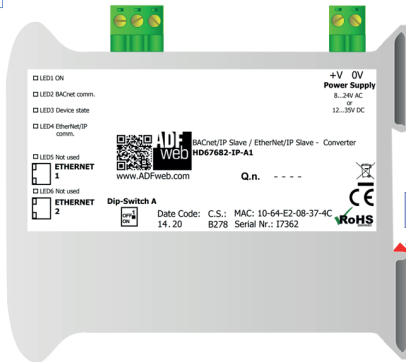

Rail DIN Clamp

**Led1:**  
Green ON

**Led2:**  
Green BACnet comm.

**Led3:**  
Green Device state

**Led4:**  
Green Ethernet/IP comm.

**Led5:**  
Green Not used

**Connector3:**  
Ethernet1 port (RJ45 Plug)

**Led6:**  
Green Not used

**Connector4:**  
Ethernet2 port (RJ45 Plug)

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67682-IP-A1