



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67712\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67712_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67712-IP-2-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67712-IP-2-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67712.zip](http://www.adfweb.com/download/filefold/SW67712.zip)

**HD67712-IP-2-A1**

# BOX SHEET

**BACnet/IP Master / Modbus Slave  
Converter**

Box Sheet for Order code: HD67712-IP-2-A1  
Document code: BS67712-IP-2-A1  
V1.002



**ADFweb.com srl**


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67712-IP-2-A1

**Dip-Switch A:**  
-Dip1 – Functioning Mode  
= Normal    = Boot

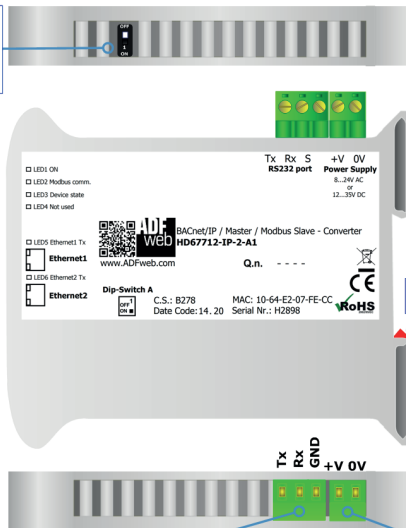

**Connector2:**  
RS232 (Isolated port)  
GND = Ground\* (to Isolated Ground)  
Rx = Rx line  
Tx = Tx line

Rail DIN  
Clamp

**Led1:**  
Green  
ON

**Led2:**  
Green  
Modbus comm.

**Led3:**  
Green  
Device state

**Led4:**  
Green  
Not used

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 port  
(RJ45 Plug)

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67712-IP-2-A1