



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67734\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67734_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67734-2-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67734-2-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67734.zip](http://www.adfweb.com/download/filefold/SW67734.zip)

**HD67734-2-A1**

# BOX SHEET

**IEC 61850 Server/ Modbus Slave  
Converter**

Box Sheet for Order code: HD67734-2-A1  
Document code: BS67734-2-A1  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy


[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67734-2-A1

**Dip-Switch A:**  
-Dip1 – Functioning Mode

 = Normal     = Boot

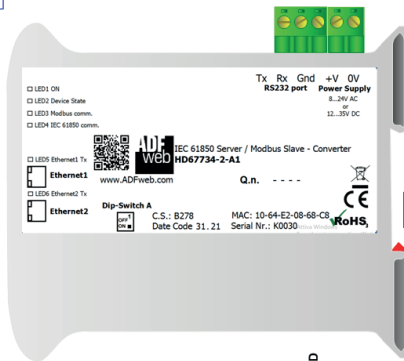

Rail DIN  
Clamp

**Led1:**  
Green  
ON

**Led2:**  
Green  
Device state

**Led3:**  
Green  
Modbus comm.

**Led4:**  
Green  
IEC 61850 comm.

**Led5:**  
Green  
Ethernet1 Tx

**Connector3:**  
Ethernet1 port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet2 Tx

**Connector4:**  
Ethernet2 port  
(RJ45 Plug)

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

**Connector2:**  
RS232 (Isolated port)  
GND = Ground\* (to Isolated Ground)  
Rx = Rx line  
Tx = Tx line

Order code: HD67734-2-A1