

EXTERNAL LINKS

HD67780-2-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67780-2-A1_ENG.pdf](http://www.adfweb.com/download/filefold/MN67780-2-A1_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67780-2-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67780-2-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67780.zip](http://www.adfweb.com/download/filefold/SW67780.zip)

HD67780-2-A1

BOX SHEET

**IEC 61850 Client / Serial (RS232)
Converter**

Box Sheet for Order code: HD67780-2-A1
Document code: BS67780-2-A1
V1.000



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67780-2-A1

Dip-Switch A:
-Dip1 – Functioning Mode
OFF = Normal ON = Boot

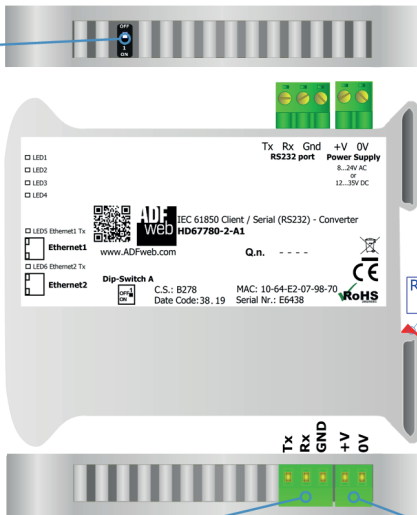

Led1:
Green
ON

Led2:
Green
Device State

Led3:
Green
Serial comm.

Led4:
Green
IEC61850 comm.

Rail DIN
Clamp

Connector3:
Ethernet1 Port
(RJ45 Plug)

Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 Port
(RJ45 Plug)

Connector2:
RS232 (Isolated port)
GND = Ground* (to Isolated Ground)
Rx = Rx line
Tx = Tx line

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67780-2-A1