

EXTERNAL LINKS

HD67810-KNX-B2

BOX SHEET

J1939 / KNX - Converter



QR of Manual

[www.adfweb.com/download/
filefold/MN67810_ENG.pdf](http://www.adfweb.com/download/filefold/MN67810_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67810-KNX-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67810-KNX-B2_ENG.pdf)

Box Sheet for order code: HD67810-KNX-B2
Document code: BS67810-B2
V1.001



QR of Software

[www.adfweb.com/download/
filefold/SW67810.zip](http://www.adfweb.com/download/filefold/SW67810.zip)



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD67810-KNX-B2

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67810-KNX-B2

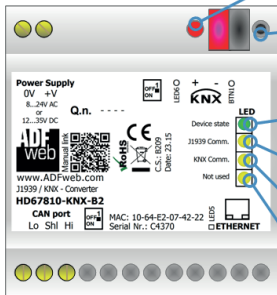

Led6:
Red
KNX Prog.

Button1:
Activation of KNX
Programming

Led1:
Green
Device state

Led2:
Yellow
J1939 comm.

Led3:
Yellow
KNX comm.

Led4:
Yellow
Not used

Connector7:
J1939

L = Loe wire
S = Shield (to Isolated Ground)
H = High wire




Dip-Switch C:
-Dip1 – Termination CAN line

= Open

= 120 ohm

Connector2:
Ethernet Port
(RJ45 Plug)

Led5:
Green
Link Ethernet

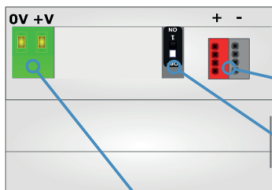

Connector8:
KNX

Connector1:
Power Supply
0V = Ground
+V = Positive wire
V AC: min 15V ; max 21V
V DC: min 18V ; max 35V

Dip-Switch A:
-Dip1 – Functioning Mode
= Normal Mode
= Boot Mode

Order code: HD67810-KNX-B2