

## EXTERNAL LINKS

HD67838-B2

# BOX SHEET

DALI / DMX - Converter



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67838\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67838_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67838-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67838-B2_ENG.pdf)

Box Sheet for order code: HD67838-B2  
Document code: BS67838-B2  
V1.001



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67838.zip](http://www.adfweb.com/download/filefold/SW67838.zip)



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

**HD67838-B2**

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67838-B2

## Dip-Switch B:

-Dip1 - Termination RS485 line



= Open



= 120 ohm

## Dip-Switch A:

-Dip1 - Functioning Mode



= Normal Mode



= Boot Mode



**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
Serial comm.

**Led3:**  
Yellow  
DALI comm.


**Led4:**  
Yellow  
Comm. error



**Connector2:**  
DALI Port  
(Unpolarized)

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet

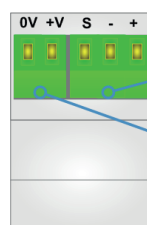

**Connector4:**  
RS485 port  
S = Shield (to Isolated Ground)  
- = Negative wire  
+ = Positive wire

**Connector1:**  
Power Supply  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67838-B2