



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67861\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67861_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67861-5-A1-2A-2B\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67861-5-A1-2A-2B_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67861.zip](http://www.adfweb.com/download/filefold/SW67861.zip)

HD67861-5-A1-2A-2B

# BOX SHEET

IO-Link / Modbus Slave - Converter

Box Sheet for Order code: HD67861-5-A1-2A-2B

Document code: BS67861-5-A1-2A-2B

V1.000




**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Marenco di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67861-5-A1-2A-2B

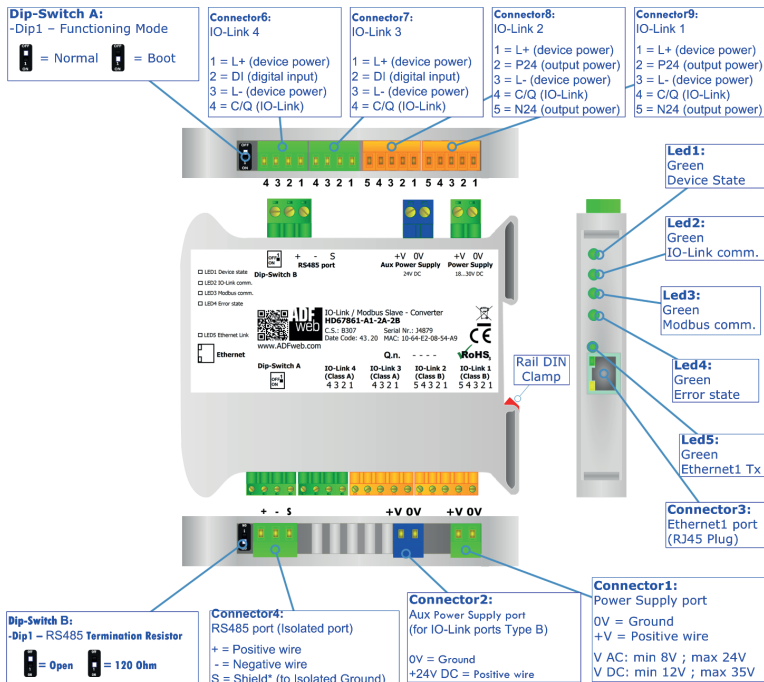

Order code: HD67861-5-A1-2A-2B