



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67876\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67876_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67876-A1-4A-4B\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67876-A1-4A-4B_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67876.zip](http://www.adfweb.com/download/filefold/SW67876.zip)

**HD67876-A1-4A-4B**

# BOX SHEET

**IO-Link / PROFINET slave – Converter**

Box Sheet for Order code: HD67876-A1-4A-4B  
Document code: BS67876-A1-4A-4B  
V1.000




**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Marenco di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67876-A1-4A-4B

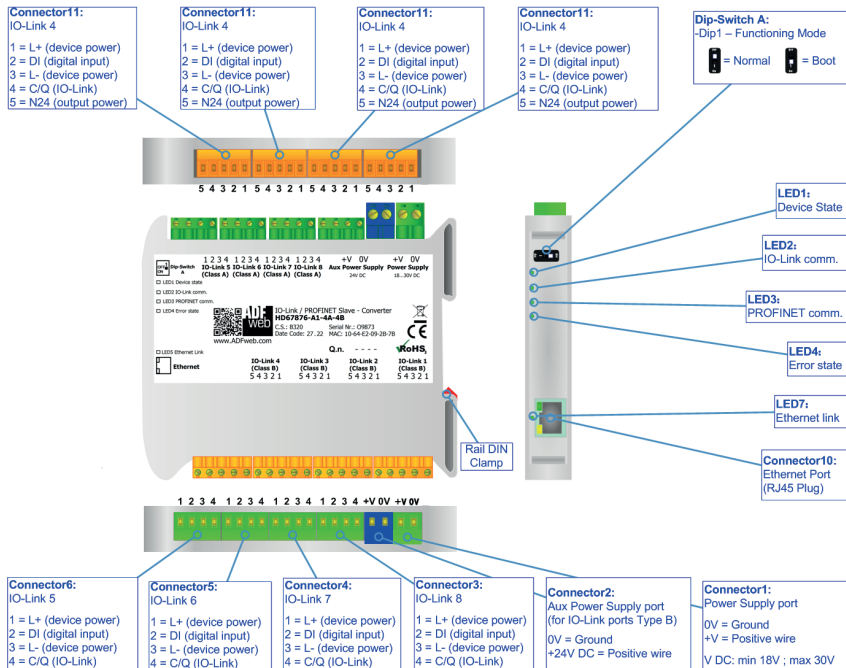

Order code: HD67876-A1-4A-4B