



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67932\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67932_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67932-2-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67932-2-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67932.zip](http://www.adfweb.com/download/filefold/SW67932.zip)

**HD67932-2-B2**

# BOX SHEET

## RS232 / MQTT - Converter

Box Sheet for order code: HD67932-2-B2  
Document code: BS67932-2-B2  
V1.001



**ADFweb.com srl**  
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67932-2-B2

## Dip-Switch A:


-Dip1 - Functioning Mode



= Normal Mode



= Boot Mode

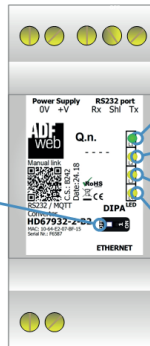


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
Serial comm.

**Led3:**  
Yellow  
MQTT status

**Led4:**  
Yellow  
Not Used

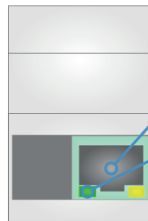

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet



**Connector4:**  
RS232 port

Tx = Device Tx  
Rx = Device Rx  
SHI = Shield (to Isolated Ground)

**Connector1:**  
Power Supply

0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67932-2-B2