



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67940\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67940_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67940-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67940-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67940.zip](http://www.adfweb.com/download/filefold/SW67940.zip)

**HD67940-B2**

# BOX SHEET

## CANopen / MQTT – Converter

Box Sheet for Order code: HD67940-B2  
Document code: BS67940-B2  
V1.001



**ADFweb.com srl**  
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67940-B2

## Dip-Switch B:

-Dip1 - Termination RS485 line



= Open



= 120 ohm

## Dip-Switch A:


-Dip1 - Functioning Mode



= Normal Mode



= Boot Mode

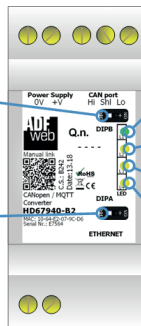


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
CANopen comm.

**Led3:**  
Yellow  
MQTT status

**Led4:**  
Yellow  
Comm. error

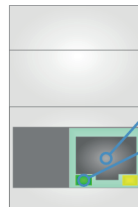

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet



**Connector4:**  
CAN port  
Hi = High wire  
SHI = Shield\* (to Isolated Ground)  
Lo = Low wire

**Connector1:**  
Power Supply  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67940-B2