



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67946\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67946_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67946-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67946-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67946.zip](http://www.adfweb.com/download/filefold/SW67946.zip)

**HD67946-B2**

# BOX SHEET

**J1939 / MQTT - Converter**

Box Sheet for Order code: HD67946-B2  
Document code: HD67946-B2  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67946-B2

## Dip-Switch B:

-Dip1 – Termination CAN line



= Open



= 120 ohm

## Dip-Switch A:


-Dip1 – Functioning Mode



= Normal Mode



= Boot Mode

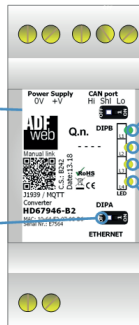

## Led1:

Green  
Device state

## Led2:

Yellow  
j1939 comm.

## Led3:

Yellow  
MQTT status

## Led4:

Yellow  
Not used




## Connector3:

Ethernet Port  
(RJ45 Plug)

## Led5:

Green  
Link Ethernet

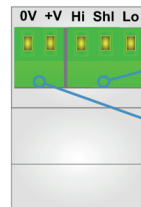

## Connector4:

CAN port

Hi = High wire  
Shl = Shield\* (to Isolated Ground)  
Lo = Low wire

## Connector1:

Power Supply

0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V