



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67B12\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B12_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67B12-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B12-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67B12.zip](http://www.adfweb.com/download/filefold/SW67B12.zip)

**HD67B12-B2**

# BOX SHEET

OPC UA Client / CAN - Converter

Box Sheet for order code: HD67B12-B2  
Document code: BS67B12-B2  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67B12-B2


**Dip-Switch B:**  
-Dip1 – Termination CAN line

= Open    = 120 ohm

**Dip-Switch A:**  
-Dip1 – Functioning Mode

= Normal Mode

= Boot Mode

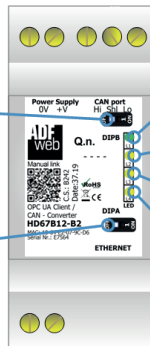


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
OPC UA comm.


**Led3:**  
Yellow  
CAN comm.

**Led4:**  
Yellow  
Error state

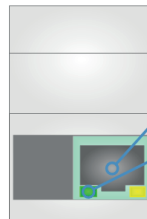

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet

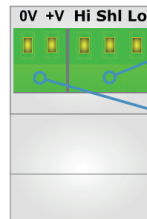

**Connector4:**  
CAN port

Hi = High wire  
Sh = Shield\* (to Isolated Ground)  
Lo = Low wire

**Connector1:**  
Power Supply

0V = Ground  
+V = Positive wire

V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67B12-B2