



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67B22\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B22_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67B22-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B22-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67B22.zip](http://www.adfweb.com/download/filefold/SW67B22.zip)

**HD67B22-B2**

# BOX SHEET

## OPC UA Client / PROFINET Slave - Converter

Box Sheet for order code: HD67B22-B2  
Document code: BS67B22-B2  
V1.001



**ADFweb.com srl**  
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)


# CONNECTION SCHEME

Order code: HD67B22-B2

**Dip-Switch A:**  
-Dip1 – Functioning Mode

OFF 1 = Normal Mode

ON 2 = Boot Mode

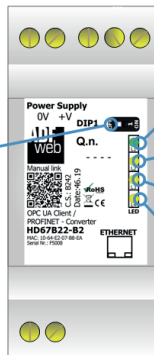


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
OPC UA comm.

**Led3:**  
Yellow  
PROFINET comm.

**Led4:**  
Yellow  
OPC UA error

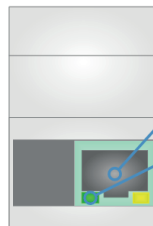

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet



**Connector1:**  
Power Supply  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V