

EXTERNAL LINKS

HD67B26-5-B2



QR of Manual

[www.adfweb.com/download/
filefold/MN67B26_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B26_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B26-5-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B26-5-B2_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B26.zip](http://www.adfweb.com/download/filefold/SW67B26.zip)

HD67B26-5-B2

BOX SHEET

**OPC UA Server / Serial RS485
Converter**

Box Sheet for Order code: HD6B26-5-B2
Document code: BS67B26-5-B2
V1.001



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67B26-5-B2


Dip-Switch B:

-Dip1 - Termination RS485 line



Dip-Switch A:

-Dip1 - Functioning Mode

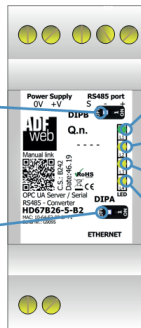


Led1:
Green
Device state

Led2:
Yellow
OPC UA comm.

Led3:
Yellow
Serial comm.

Led4:
Yellow
Error state

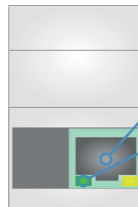

Connector3:
Ethernet Port
(RJ45 Plug)

Led5:
Green
Link Ethernet



Connector4:
RS485 port
S = Shield (to Isolated Ground)
- = Negative wire
+ = Positive wire

Connector1:
Power Supply
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67B26-5-B2