



QR of Manual

[www.adfweb.com/download/
filefold/MN67B32_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B32_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B32-IP-B2_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B32-IP-B2_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B32.zip](http://www.adfweb.com/download/filefold/SW67B32.zip)

HD67B32-IP-B2

BOX SHEET

**OPC UA Server / BACnet IP Slave
Converter**

Box Sheet for Order code: HD67B32-IP-B2
Document code: BS67B32-IP-B2
V1.001



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME


Order code: HD67B32-IP-B2

Dip-Switch A:
-Dip1 – Functioning Mode



ON = Normal Mode

OFF = Boot Mode

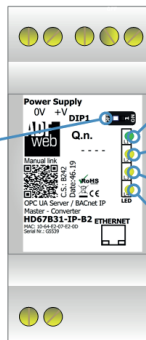

Led1:
Green
Device state

Led2:
Yellow
OPC UA comm.

Led3:
Yellow
BACnet comm.

Led4:
Yellow
Error state

