

## EXTERNAL LINKS

HD67B43-5-B2



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67B43\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B43_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67B43-5-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B43-5-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67B43.zip](http://www.adfweb.com/download/filefold/SW67B43.zip)

**HD67B43-5-B2**

# BOX SHEET

**OPC UA Server / NMEA 0183 - Converter**

Box Sheet for Order code: HD67B43-5-B2  
Document code: BS67B43-5-B2  
V1.001



**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67B43-5-B2


## Dip-Switch B:

-Dip1 – Termination RS485 line



## Dip-Switch A:

-Dip1 – Functioning Mode

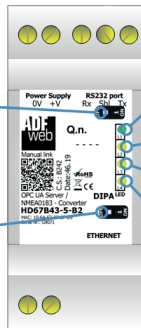


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
OPC UA comm.


**Led3:**  
Yellow  
NMEA 0183 comm.

**Led4:**  
Yellow  
Error state

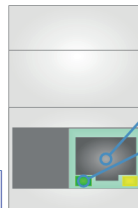

**Connector3:**  
Ethernet Port  
(RJ45 Plug)

**Led5:**  
Green  
Link Ethernet

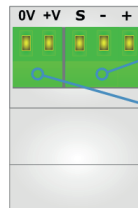

**Connector4:**  
RS485 port

S = Shield (to Isolated Ground)  
- = Negative wire  
+ = Positive wire

**Connector1:**  
Power Supply

0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V