

EXTERNAL LINKS

HD67B71-485-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67B71_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B71_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B71-485-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B71-485-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B71.zip](http://www.adfweb.com/download/filefold/SW67B71.zip)

HD67B71-485-A1

BOX SHEET

PROFINET Master / Modbus Slave Converter

Box Sheet for Order code: HD67B71-485-A1
Document code: BS67B71-485-A1
V1.002



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67B71-485-A1

Dip-Switch A:
-Dip1 – Functioning Mode
= Normal = Boot

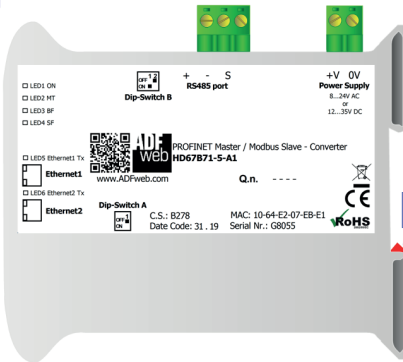

Led1:
Green
ON

Led2:
Yellow
MT

Led3:
Red
BF

Led4:
Red
SF

Led5:
Green
Ethernet1 Tx

Connector3:
Ethernet1 port
(RJ45 Plug)

Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 port
(RJ45 Plug)

Rail DIN
Clamp

Dip-Switch B:
-Dip1 – RS485 Termination Resistor
= Open = 120 Ohm
-Dip2 – Not used

Connector2:
RS485 (Isolated port)
S = Shield* (to Isolated Ground)
B = Negative wire
A = Positive wire

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67B71-485-A1