

EXTERNAL LINKS

HD67B78-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67B78_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B78_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B78-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B78-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B78.zip](http://www.adfweb.com/download/filefold/SW67B78.zip)

HD67B78-A1

BOX SHEET

**PROFINET Master / EtherNet/IP Slave
Converter**

Box Sheet for Order code: HD67B78-A1
Document code: BS67B78-A1
V1.001



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67B78-A1

Dip-Switch A:
-Dip1 - Functioning Mode
☐ = Normal ☐ = Boot

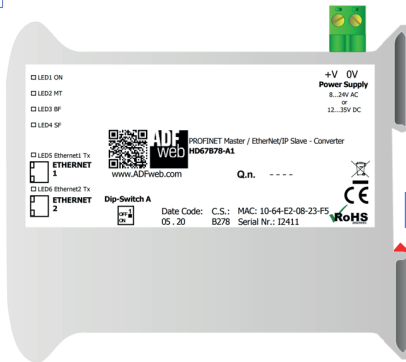

Rail DIN Clamp

Led1:
Green
ON

Led2:
Yellow
MT

Led3:
Red
BF

Led4:
Red
SF

Led5:
Green
Ethernet1 Tx

Connector3:
Ethernet1 port
(RJ45 Plug)

Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 port
(RJ45 Plug)

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V



Order code: HD67B78-A1