



QR of Manual

[www.adfweb.com/download/
filefold/MN67B81_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B81_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B81-MSTP-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B81-MSTP-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B81.zip](http://www.adfweb.com/download/filefold/SW67B81.zip)

HD67B81-MSTP-A1

BOX SHEET

**BACnet/MSTP Slave / PROFINET Master
Converter**

Box Sheet for Order code: HD67B81-MSTP-A1
Document code: BS67B81-MSTP-A1
V1.001



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67B81-MSTP-A1

Dip-Switch A:
-Dip1 – Functioning Mode
 = Normal  = Boot

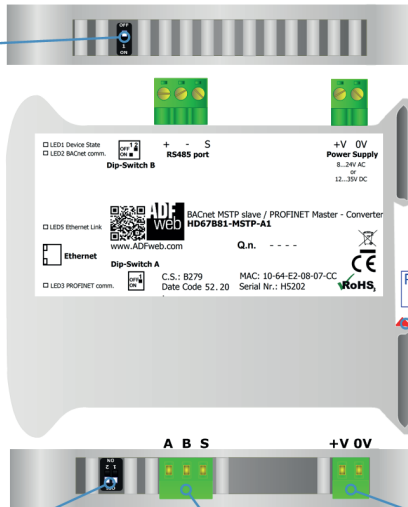

Led1:
Green
Device state

Led2:
Green
BACnet comm.

Led5:
Green
Ethernet Tx

Connector5:
Ethernet Port
(RJ45 Plug)

Led3:
Green
PROFINET comm.

Rail DIN
Clamp

Dip-Switch B:
-Dip1 – RS485 Termination Resistor
 = Open  = 220 Ohm
-Dip2 – Not used

Connector3:
RS485 (Isolated port)
S = Shield* (to Isolated Ground)
B = Negative wire
A = Positive wire

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67B81-MSTP-A1