

EXTERNAL LINKS

HD67B82-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67B82-A1_ENG.pdf](http://www.adfweb.com/download/filefold/MN67B82-A1_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67B82-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67B82-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67B82.zip](http://www.adfweb.com/download/filefold/SW67B82.zip)

HD67B82-A1

BOX SHEET

**IEC 61850 Server / PROFINET Master
Converter**

Box Sheet for Order code: HD67B82-A1
Document code: BS67B82-A1
V1.000



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67B82-A1

Dip-Switch A:


-Dip1 - Functioning Mode



= Normal



= Boot

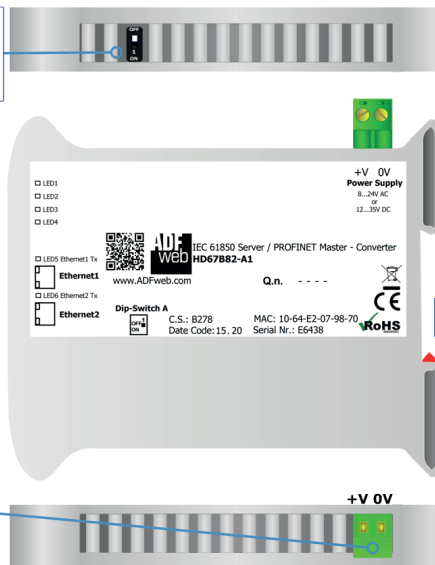

Led1:
Green
ON

Led2:
Yellow
MT

Led3:
Red
BF

Led4:
Red
SF

Led5:
Green
Ethernet1 Tx

Connector3:
Ethernet1 port
(RJ45 Plug)

Led6:
Green
Ethernet2 Tx

Connector4:
Ethernet2 port
(RJ45 Plug)

Connector1:

Power Supply port

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67B82-A1