



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67C52\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67C52_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67C52-5-B2\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67C52-5-B2_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67C52.zip](http://www.adfweb.com/download/filefold/SW67C52.zip)

**HD67C52-5-B2**

# BOX SHEET

**EnOcean / Modbus (RS232 o RS485)  
Converter**

Box Sheet for Order code: HD67C52-5-B2  
Document code: BS67C52-5-B2  
V1.000




**ADFweb.com srl**

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67C52-5-B2

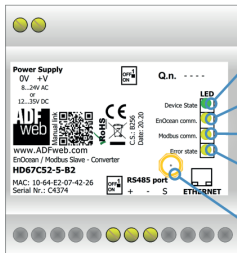


**Led1:**  
Green  
Device state

**Led2:**  
Yellow  
EnOcean comm.

**Led3:**  
Yellow  
Modbus comm.

**Led4:**  
Yellow  
Error state

**Connector5:**  
Antenna

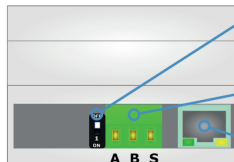

**Dip-Switch B:**  
-Dip1 – Termination RS485 line



= Normal Mode




= Boot Mode

**Connector6:**  
RS485 port

S = Shield (to Isolated Ground)  
B = Negative wire  
A = Positive wire

**Connector2:**  
Ethernet Port  
(RJ45 Plug)

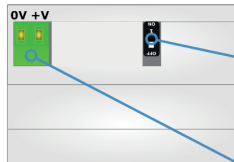

**Dip-Switch A:**  
-Dip1 – Functioning Mode



Normal Mode



Boot Mode

**Connector1:**  
Power Supply  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67C52-5-B2