

EXTERNAL LINKS

HD67D16-MSTP-915MHz



QR of Manual

[www.adfweb.com/download/
filefold/MN67D16_ENG.pdf](http://www.adfweb.com/download/filefold/MN67D16_ENG.pdf)

BOX SHEET

BACnet/MSTP Master / LoRaWAN Converter



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67D16-MSTP-915MHz_ENG.pdf](http://www.adfweb.com/download/filefold/BS67D16-MSTP-915MHz_ENG.pdf)

Box Sheet for Order code: HD67D16-MSTP-915MHz
Document code: BS67D16-MSTP-915MHz
V1.000



QR of Software

[www.adfweb.com/download/
filefold/SW67D16.zip](http://www.adfweb.com/download/filefold/SW67D16.zip)



ADFweb.com srl


Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD67D16-MSTP-915MHz

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67D16-MSTP-915MHz

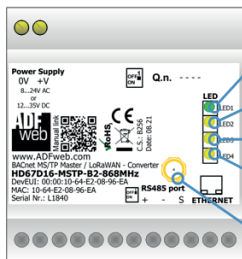


Led1:
Green
Device state

Led2:
Yellow
LoRaWAN comm.

Led3:
Yellow
BACnet comm.

Led4:
Yellow
Error state

Connector5:
Antenna

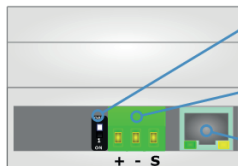

Dip-Switch B:

-Dip1 - Termination RS485 line



= Open



= 120 ohm

Connector6:

RS485 port

S = Shield (to Isolated Ground)

- = Negative wire

+ = Positive wire

Connector2:

Ethernet Port
(RJ45 Plug)

Dip-Switch A:

-Dip1 - Function Mode



= Normal Mode



= Boot Mode

Connector1:

Power Supply

0V = Ground

+V = Positive wire

V AC: min 8V ; max 24V

V DC: min 12V ; max 35V

Order code: HD67D16-MSTP-915MHz