

EXTERNAL LINKS

HD67D26-B2-xxxMHz



QR of Manual

[www.adfweb.com/download/
filefold/MN67D26_ENG.pdf](http://www.adfweb.com/download/filefold/MN67D26_ENG.pdf)

BOX SHEET

LoRaWAN / J1939
Converter



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67D26-B2-xxxMHz_ENG.pdf](http://www.adfweb.com/download/filefold/BS67D26-B2-xxxMHz_ENG.pdf)

Box Sheet for Order code: HD67D26-B2-xxxMHz
Document code: BS67D26-B2-xxxMHz
V1.000



QR of Software

[www.adfweb.com/download/
filefold/SW67D26.zip](http://www.adfweb.com/download/filefold/SW67D26.zip)



ADFweb.com srl



Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

HD67D26-B2-xxxMHz

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67D26-B2-xxxMHz

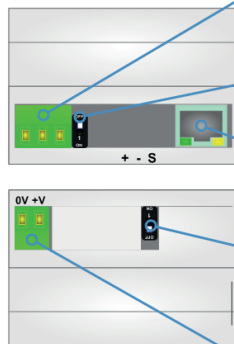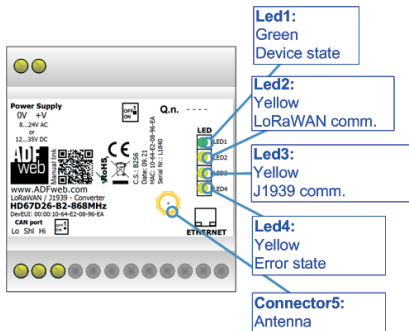

Connector7:
CAN port



L = Low wire
S = Shield (to Isolated Ground)
H = High wire

Dip-Switch C:
-Dip1 – Termination CAN line

 = Open  = 120 ohm

Connector2:
Ethernet Port
(RJ45 Plug)

Dip-Switch A:
-Dip1 – Functioning Mode

 = Normal Mode
 = Boot Mode

Connector1:
Power Supply

0V = Ground
+V = Positive wire

V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67D26-B2-xxxMHz