

EXTERNAL LINKS

HD67D40-B2-915MHz



QR of Manual

[www.adfweb.com/download/
filefold/MN67D40-B2-915MHz_ENG.pdf](http://www.adfweb.com/download/filefold/MN67D40-B2-915MHz_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67D40-B2-915MHz_ENG.pdf](http://www.adfweb.com/download/filefold/BS67D40-B2-915MHz_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67D40.zip](http://www.adfweb.com/download/filefold/SW67D40.zip)

HD67D40-B2-915MHz

BOX SHEET

LoRaWAN / SNMP Manager Converter

Box Sheet for Order code: HD67D40-B2-915MHz
Document code: BSD40-B2-915MHz
V1.000




ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67D40-B2-915MHz

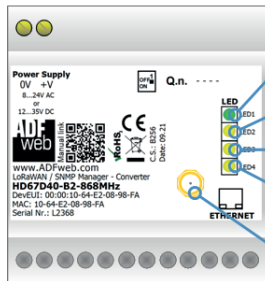


Led1:
Green
Device state

Led2:
Yellow
LoRaWAN comm.

Led3:
Yellow
SNMP comm.

Led4:
Yellow
Error state

Connector5:
Antenna

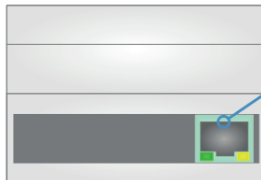

Connector2:
Ethernet Port
(RJ45 Plug)



Dip-Switch A:
-Dip1 - Functioning Mode

= Normal Mode

= Boot Mode

Connector1:
Power Supply

0V = Ground
+V = Positive wire

V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67D40-B2-915MHz