

EXTERNAL LINKS

HD67E11-A1

BOX SHEET

EtherCAT Slave / DMX
Converter

Box Sheet for Order code: HD67E11-A1
Document code: BS67E11-A1
V1.000



ADFweb.com srl

Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

QR of Manual

[www.adfweb.com/download/
filefold/MN67E11_ENG.pdf](http://www.adfweb.com/download/filefold/MN67E11_ENG.pdf)

QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67E11-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67E11-A1_ENG.pdf)

 
 
 
QR of Software

[www.adfweb.com/download/
filefold/SW67E11.zip](http://www.adfweb.com/download/filefold/SW67E11.zip)

HD67E11-A1

CONNECTION SCHEME

Order code: HD67E11-A1

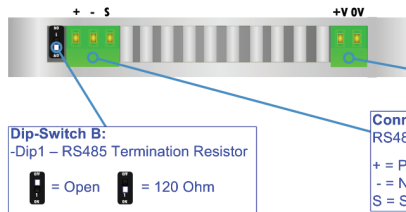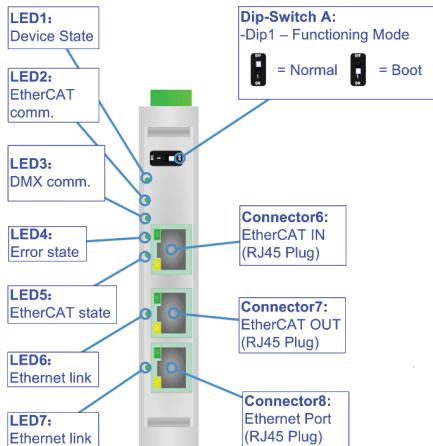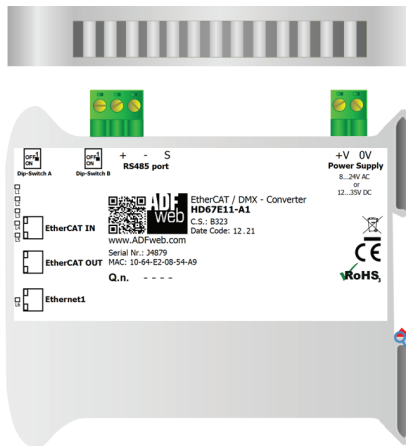

Dip-Switch B:
-Dip1 – RS485 Termination Resistor
= Open = 120 Ohm

Connector5:
RS485 port (Isolated port)
+ = Positive wire
- = Negative wire
S = Shield* (to Isolated Ground)

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67E11-A1