

EXTERNAL LINKS

HD67E18-2-A1



QR of Manual

[www.adfweb.com/download/
filefold/MN67E18_ENG.pdf](http://www.adfweb.com/download/filefold/MN67E18_ENG.pdf)



QR of Box-Sheet

[www.adfweb.com/download/
filefold/BS67E18-2-A1_ENG.pdf](http://www.adfweb.com/download/filefold/BS67E18-2-A1_ENG.pdf)



QR of Software

[www.adfweb.com/download/
filefold/SW67E18.zip](http://www.adfweb.com/download/filefold/SW67E18.zip)

HD67E18-2-A1

BOX SHEET

**EtherCAT Slave / NMEA0183
Converter**

Box Sheet for Order code: HD67E18-2-A1
Document code: BS67E18-2-A1
V1.000



ADFweb.com srl
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

www.ADFweb.com

CONNECTION SCHEME

Order code: HD67E18-2-A1



LED1:
Device State

LED2:
NMEA0183
comm.

LED3:
EtherCAT
comm.

LED4:
Error state

LED5:
EtherCAT state

LED6:
Ethernet link

LED7:
Ethernet link

Dip-Switch A:
-Dip1 – Functioning Mode
☐ = Normal ☐ = Boot

Connector6:
EtherCAT IN
(RJ45 Plug)

Connector7:
EtherCAT OUT
(RJ45 Plug)

Connector8:
Ethernet Port
(RJ45 Plug)

Rail DIN
Clamp



Dip-Switch B:
-Dip1 – RS485 Termination Resistor
☐ = Open ☐ = 120 Ohm

Connector5:
RS485 port (Isolated port)
+ = Positive wire
- = Negative wire
S = Shield* (to Isolated Ground)

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

Order code: HD67E18-2-A1