

## EXTERNAL LINKS

HD67E73-A1



QR of Manual

---

[www.adfweb.com/download/  
filefold/MN67E73\\_ENG.pdf](http://www.adfweb.com/download/filefold/MN67E73_ENG.pdf)



QR of Box-Sheet

---

[www.adfweb.com/download/  
filefold/BS67E73-A1\\_ENG.pdf](http://www.adfweb.com/download/filefold/BS67E73-A1_ENG.pdf)



QR of Software

---

[www.adfweb.com/download/  
filefold/SW67E73.zip](http://www.adfweb.com/download/filefold/SW67E73.zip)

**HD67E73-A1**

# BOX SHEET

**EtherCAT Master / PROFINET slave  
Converter**

Box Sheet for Order code: HD67E73-A1  
Document code: BS67E73-A1  
V1.000



**ADFweb.com srl**  
Strada Nuova, 17, IT-31010 Mareno di Piave, Treviso - Italy

[www.ADFweb.com](http://www.ADFweb.com)

# CONNECTION SCHEME

Order code: HD67E73-A1

## Dip-Switch A:

-Dip1 – Functioning Mode



= Normal



= Boot



- LED1 ON
- LED2 Device state
- LED3 PROFINET comm.
- LED4 EtherCAT comm.
- LED5 EtherCAT link
- LED6 Ethernet link

- EtherCAT port
- Ethernet port

Dip-Switch A



Date Code 06.22 C.S.: MAC: 10-64-E2-08-E5-C2 B278 Serial Nr.: N2024



EtherCAT Master / PROFINET Slave - Converter

HD67E73-A1

www.ADFweb.com

Q.n. ---

+V 0V  
Power Supply  
8...24V AC  
or  
12...35V DC

+V 0V

Rail DIN  
Clamp

**Led1:**  
Green  
ON

**Led2:**  
Green  
Device state

**Led3:**  
Green  
PROFINET comm.

**Led4:**  
Green  
EtherCAT comm.

**Led5:**  
Green  
EtherCAT link

**Connector5:**  
EtherCAT port  
(RJ45 Plug)

**Led6:**  
Green  
Ethernet link

**Connector6:**  
Ethernet port  
(RJ45 Plug)

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V

Order code: HD67E73-A1