![ADFweb logo] Electronic Devices
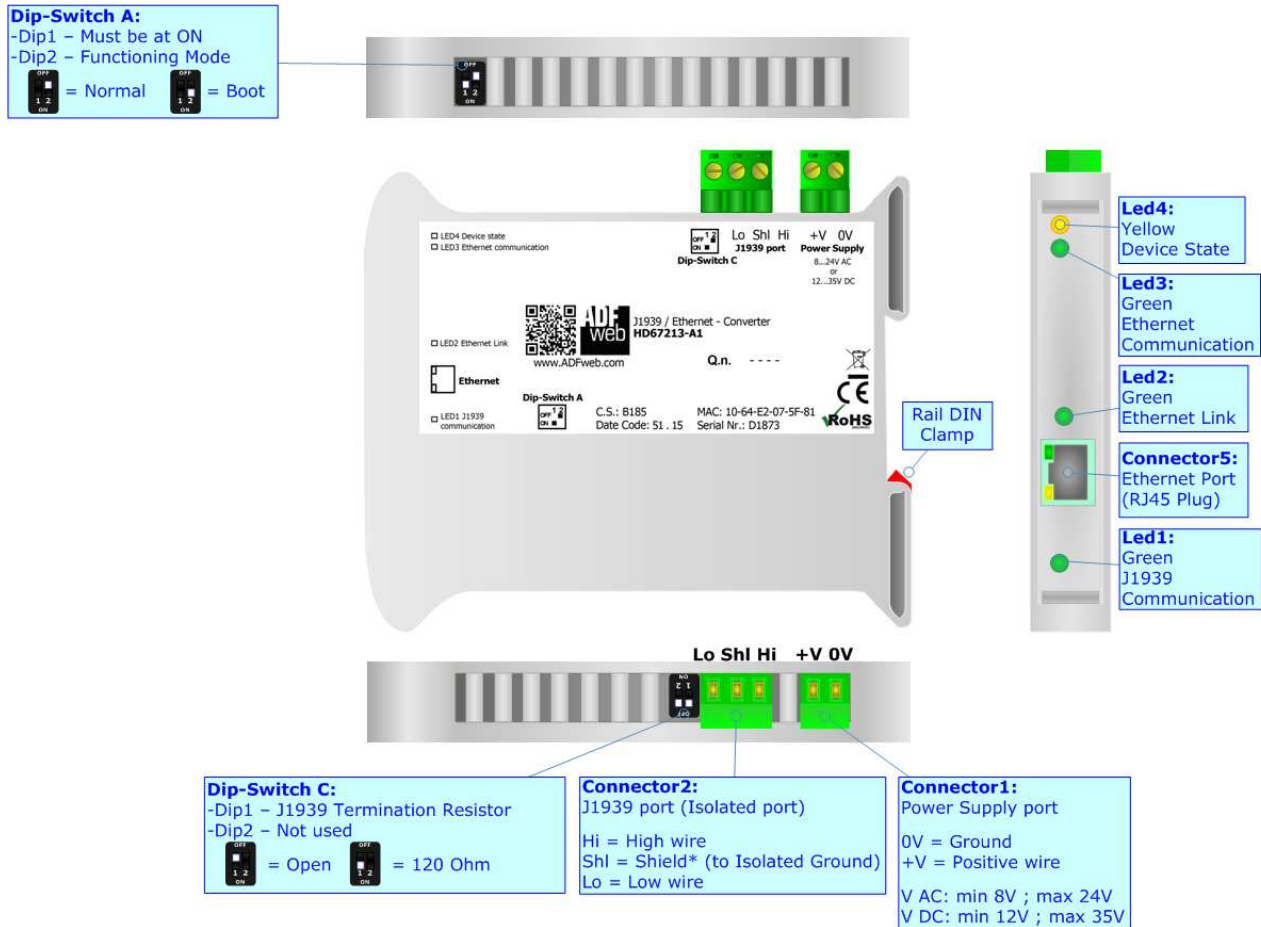
J1939 / Ethernet – Converter

To obtain the complete manual please go to:

www.adfweb.com/download/filefold/MN67213_ENG.pdf

To obtain the new version of this box sheet please go to:

www.adfweb.com/download/filefold/BS67213-A1_ENG.pdf

CONNECTION SCHEME:

Dip-Switch A:
-Dip1 – Must be at ON
-Dip2 – Functioning Mode
= Normal   = Boot

Led4: Yellow Device State

Led3: Green Ethernet Communication

Led2: Green Ethernet Link

Connector5: Ethernet Port (RJ45 Plug)

Led1: Green J1939 Communication

Rail DIN Clamp

Dip-Switch C:
-Dip1 – J1939 Termination Resistor
-Dip2 – Not used
= Open   = 120 Ohm

Connector2:
J1939 port (Isolated port)

Hi = High wire
Shl = Shield* (to Isolated Ground)
Lo = Low wire

Connector1:
Power Supply port

0V = Ground
+V = Positive wire

V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

CONFIGURATION SOFTWARE:

For setting up the device you need the software named SW67213, updated at least to the version 2.000. To obtain this software please go to:

www.adfweb.com/download/filefold/SW67213.zip

Manual	Box-Sheet	Software